

PERFORMANCE
MADE
SMARTER

Product manual

9116

Universal converter



Segurança
INMETRO



ClassNK
APPROVED



TEMPERATURE | I.S. INTERFACES | COMMUNICATION INTERFACES | MULTIFUNCTIONAL | ISOLATION | DISPLAY

No. 9116V112-UK
Product version: 9116-003

PR
electronics

6 Product Pillars

to meet your every need

Individually outstanding, unrivalled in combination

With our innovative, patented technologies, we make signal conditioning smarter and simpler. Our portfolio is composed of six product areas, where we offer a wide range of analog and digital devices covering over a thousand applications in industrial and factory automation. All our products comply with or surpass the highest industry standards, ensuring reliability in even the harshest of environments and have a 5-year warranty for greater peace of mind.



Temperature

Our range of temperature transmitters and sensors provides the highest level of signal integrity from the measurement point to your control system. You can convert industrial process temperature signals to analog, bus or digital communications using a highly reliable point-to-point solution with a fast response time, automatic self-calibration, sensor error detection, low drift, and top EMC performance in any environment.



I.S. Interface

We deliver the safest signals by validating our products against the toughest safety standards. Through our commitment to innovation, we have made pioneering achievements in developing I.S. interfaces with SIL 2 Full Assessment that are both efficient and cost-effective. Our comprehensive range of analog and digital intrinsically safe isolation barriers offers multifunctional inputs and outputs, making PR an easy-to-implement site standard. Our backplanes further simplify large installations and provide seamless integration to standard DCS systems.



Communication

We provide inexpensive, easy-to-use, future-ready communication interfaces that can access your PR installed base of products. All the interfaces are detachable, have a built-in display for readout of process values and diagnostics, and can be configured via push-buttons. Product specific functionality includes communication via Modbus and Bluetooth and remote access using our PR Process Supervisor (PPS) application, available for iOS and Android.



Multifunction

Our unique range of single devices covering multiple applications is easily deployable as your site standard. Having one variant that applies to a broad range of applications can reduce your installation time and training, and greatly simplify spare parts management at your facilities. Our devices are designed for long-term signal accuracy, low power consumption, immunity to electrical noise and simple programming.



Isolation

Our compact, fast, high-quality 6 mm isolators are based on microprocessor technology to provide exceptional performance and EMC-immunity for dedicated applications at a very low total cost of ownership. They can be stacked both vertically and horizontally with no air gap separation between units required.



Display

Our display range is characterized by its flexibility and stability. The devices meet nearly every demand for display readout of process signals and have universal input and power supply capabilities. They provide a real-time measurement of your process value no matter the industry and are engineered to provide a user-friendly and reliable relay of information, even in demanding environments.

Universal converter

9116

Table of contents

| | |
|--|----|
| Warning | 4 |
| Symbol identification | 4 |
| Safety instructions | 4 |
| Marking | 5 |
| How to demount system 9000 | 6 |
| Mounting the PR 4500 communication interfaces | 6 |
| Advanced features | 7 |
| Application | 7 |
| Technical characteristics | 7 |
| Applications - 9116Axx | 8 |
| Applications - 9116Bxx | 9 |
| Order | 10 |
| Accessories | 10 |
| Electrical specifications | 10 |
| Configuration of sensor error check | 15 |
| Input signal outside range | 15 |
| Sensor error detection | 15 |
| Error indications | 16 |
| Connections | 17 |
| Block diagram | 18 |
| Signal error and cable fault indications without display front | 19 |
| Configuration / operating the function keys | 20 |
| Routing diagram | 23 |
| Routing diagram, advanced settings (ADV.SET) | 25 |
| Help text overview | 26 |
| Graphic depiction of window | 28 |
| Graphic depiction of setpoint | 29 |
| IECEX Installation Drawing | 30 |
| ATEX / UKEX Installation Drawing | 35 |
| FM Installation Drawing | 40 |
| UL Installation Drawing | 44 |
| Desenho de instalação INMETRO | 51 |
| KC 설치 도면 | 56 |
| Document history | 61 |

Warning



The following operations should only be carried out on a disconnected device and under ESD-safe conditions:

- General mounting, wire connection and disconnection.
- Troubleshooting the device.

Repair of the device and replacement of circuit breakers must be done by PR electronics A/S only.

Warning



Do not open the front plate of the device as this will cause damage to the connector for the display / programming front PR 4500.

This device contains no DIP-switches or jumpers.

Symbol identification



Triangle with an exclamation mark: Warning/demand. Potentially lethal situations. Read the manual before installation and commissioning of the device in order to avoid incidents that could lead to personal injury or mechanical damage.



The CE mark proves the compliance of the device with the essential requirements of the directives.



The UKCA mark proves the compliance of the device with the essential requirements of the UK regulations.



The double insulation symbol shows that the device is protected by double or reinforced insulation.



Ex devices have been approved acc. to the ATEX directive for use in connection with installations in explosive areas. See installation drawings in appendix.

Safety instructions

Definitions

Hazardous voltages have been defined as the ranges: 75 to 1500 Volt DC, and 50 to 1000 Volt AC.

Technicians are qualified persons educated or trained to mount, operate, and also trouble-shoot technically correct and in accordance with safety regulations.

Operators, being familiar with the contents of this manual, adjust and operate the knobs or potentiometers during normal operation.

Receipt and unpacking

Unpack the device without damaging it and check whether the device type corresponds to the one ordered. The packing should always follow the device until this has been permanently mounted.

Environment

Avoid direct sun light, dust, high temperatures, mechanical vibrations and shock, and rain and heavy moisture. If necessary, heating in excess of the stated limits for ambient temperatures should be avoided by way of ventilation.

The device must be installed in pollution degree 2 or better.

The device is designed to be safe at least under an altitude up to 2 000 m.

The device is designed for indoor use.

Mounting

Only technicians, who are familiar with the technical terms, warnings, and instructions in the manual and who are able to follow these, should connect the device. Should there be any doubt as to the correct handling of the device, please contact your local distributor or, alternatively,

PR electronics A/S
www.prelectronics.com

The use of stranded wires is not permitted for mains wiring except when wires are fitted with cable ends.

Stranded wire should be installed with an insulation stripping length of 5 mm or via a suitable insulated terminal such as a bootlace ferrule.

Descriptions of input / output and supply connections are shown in the block diagram and on the side label.

The device is provided with field wiring terminals and shall be supplied from a Power Supply having double / reinforced insulation. A power switch shall be easily accessible and close to the device. The power switch shall be marked as the disconnecting unit for the device.

For installation on Power Rail 9400 the power is supplied by Power Control Unit 9410.

Year of manufacture can be taken from the first two digits in the serial number.

Calibration and adjustment

During calibration and adjustment, the measuring and connection of external voltages must be carried out according to the specifications of this manual. The technician must use tools and instruments that are safe to use.

Normal operation

Operators are only allowed to adjust and operate devices that are safely fixed in panels, etc., thus avoiding the danger of personal injury and damage. This means there is no electrical shock hazard, and the device is easily accessible.

Cleaning

When disconnected, the device may be cleaned with a cloth moistened with distilled water.

Liability

To the extent the instructions in this manual are not strictly observed, the customer cannot advance a demand against PR electronics A/S that would otherwise exist according to the concluded sales agreement.

9116B2

SN: 123456789


TAG: Tag1234

| | | |
|---|--|--|
| PR PR electronics A/S, Lerbakken 10, 8410 Roande pr@prelectronics.com, www.prelectronics.com Phone +45 8637 2077, Denmark. | | LabelRevision |
| 41: Input 4W / 3W / TC+ 42: Input 4W / 3W / 2W / TC- / Pot.1 43: Input 4W / 3W / 2W / Pot.3 44: Input 4W Pot.2 | 31: Supply - 19.2 to 31.2 VDC 32: Supply + --- max. 3.5 W 33: Status Relay N.C. 34: Status Relay N.C. | |
| 51: Input mA- / V- 52: Input mA+ / Loop- 53: Input / V+ 54: Input Loop+ | 11: Output mA - 12: Output mA + 13: Output Relay N.O. 14: Output Relay | |
| <input type="checkbox"/> (I) G [Ex Ia Gq] IICIB/IIA DEKRA 23/KEK0104X <input type="checkbox"/> (I) G [Ex Ia Da] IIC KEWA 10/ATEX 0553X <input type="checkbox"/> (M) [Ex Ia Ma] I <input type="checkbox"/> H00 Ex ec nC IIC T4 Gc DEKRA 21/KEK0177X <input type="checkbox"/> H00 Ex ec nC IIC T4 Gc KEWA 10/ATEX 0553X | | Install: 91162B01 IECEx: KEM 10.0222X |
| <input type="checkbox"/> [Ex Ia Gq] IICIB/IIA <input type="checkbox"/> [Ex Ia Da] IIC <input type="checkbox"/> [Ex Ia Ma] I <input type="checkbox"/> Ex ec nC IIC T4 Gc | | Install: 91162B01 IECEx: KEM 10.0222X |
| Attention! Read manual before installation / operation. Lire manuel avant installation / opération. | | |
| FM APPROVED FM19US0535X FM19CA0031X Install: 91162B01 | | |
| Segurança <input type="checkbox"/> [Ex Ia Gq] IICIB/IIA <input type="checkbox"/> [Ex Ia Da] IIC <input type="checkbox"/> [Ex Ia Ma] I <input type="checkbox"/> Ex ec nC IIC T4 Gc DEKRA 23/006X KEWA 10/ATEX 0553X Install: 91162B01 | | |
| | | |
| UNIVERSAL CONVERTER 9116 | | |

Marking

When this product has been installed as Ex ia or / and ec, use a permanent marker in the appropriate box to indicate the type of installation on the label.

How to demount system 9000

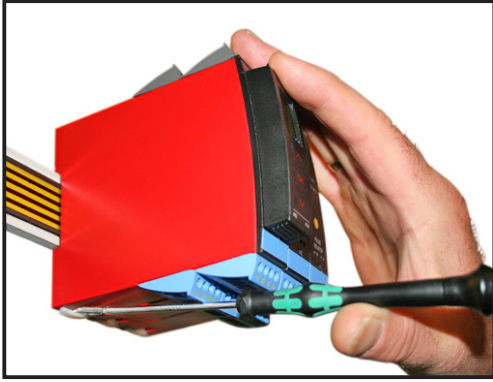

Picture 1:

By lifting the bottom lock, the device is detached from the DIN rail.

Mounting the PR 4500 communication interfaces

- 1: Insert the tabs of the PR 4500 into the slots at the top of the device.
- 2: Hinge the PR 4500 down until it snaps into place.

Demounting of the PR 4500 communication interfaces

- 3: Push the release button on the bottom of the PR 4500 and hinge the PR 4500 out and up.
- 4: With the PR 4500 hinged up, remove from the slots at the top of the device.



Universal converter

9116

- Input for RTD, TC, Ohm, potentiometer, mA and V
- Supply for 2-wire transmitters
- Active / passive mA output and relay output
- Can be supplied separately or installed on power rail, PR 9400
- SIL 2-certified via Full Assessment

Advanced features

- Configuration and monitoring by way of detachable display front (PR 4500); process calibration, signal and relay simulation.
- Advanced relay configuration, e.g. setpoint, window, delay, sensor error indication and power monitoring
- Copying of the configuration from one device to others of the same type via the display front.
- Reduced Uo Ex data < 8.3 V for active input signals.
- TC inputs with internal or external CJC for higher accuracy.
- Active / passive mA output via the same two terminals.

Application


- 9116Axx can be mounted in the safe area or in zone 2 / Class I, Division 2, Groups A, B, C, D.
- 9116Bxx can be mounted in the safe area or in zone 2 / Class 1, Division 2 and receive signals from zone 0, 1, 2 and zone 20, 21, 22 including mining / Class I/II/III, Division 1, Gr. A-G.
- Conversion and scaling of temperature, voltage, potentiometer and linear resistance signals.
- Power supply and signal isolator for 2-wire transmitters.
- Monitoring of error events and cable breakage via the individual status relay and/or a collective electronic signal via the power rail.
- The 9116 has been designed, developed and certified for use in SIL 2 applications according to the requirements of IEC 61508.
- Suitable for the use in systems up to Performance Level "d" according to ISO-13849.

Technical characteristics

- 1 green and 1 red front LED indicate operation status and malfunction. 1 yellow LED indicates relay status.
- 2.6 kVAC galvanic isolation between input, output and supply.

Applications - 9116Axx


Input signals:

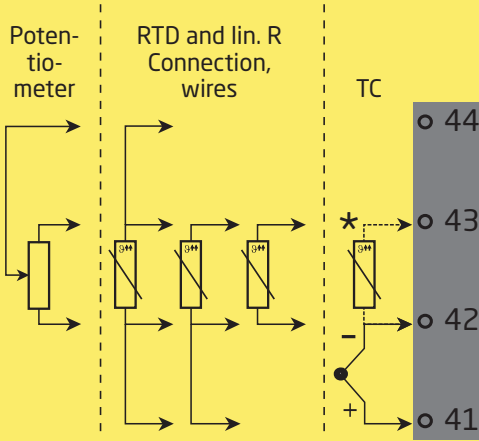


*Order separately: CJC connector 5910.

Output signals:


Analog, 0/4...20 mA and relay

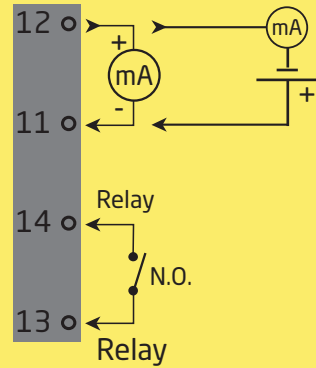

Power rail

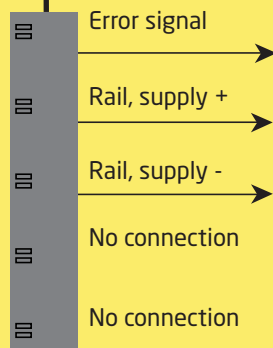

Power connection:

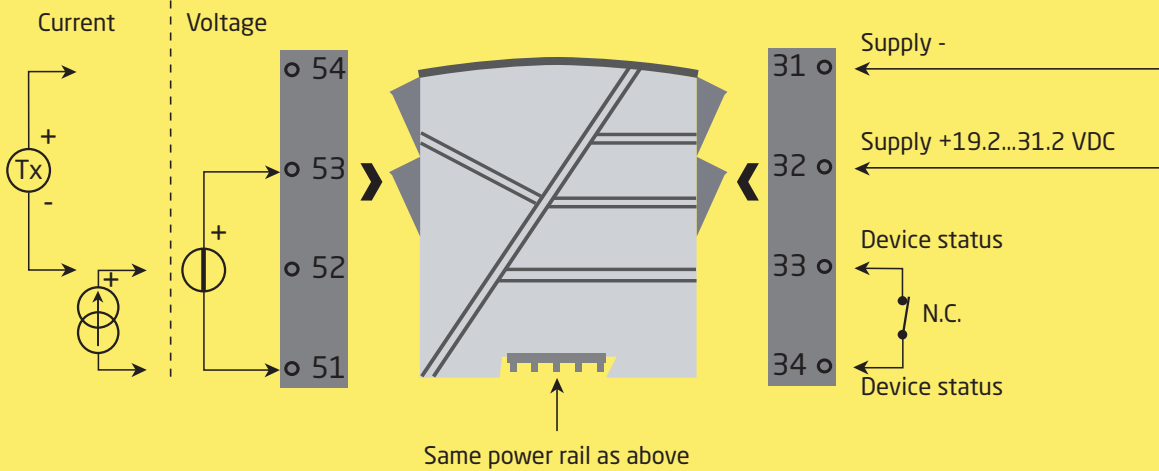


Zone 2 & Cl. 1, Div. 2, gr. A-D or Safe Area





Applications - 9116Bxx

Input signals:

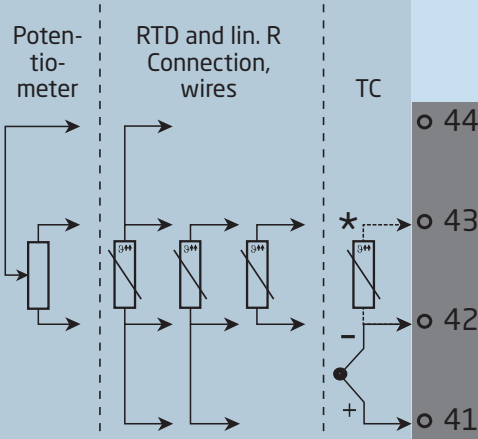


*Order separately:
CJC connector 5910Ex.

Output signals:

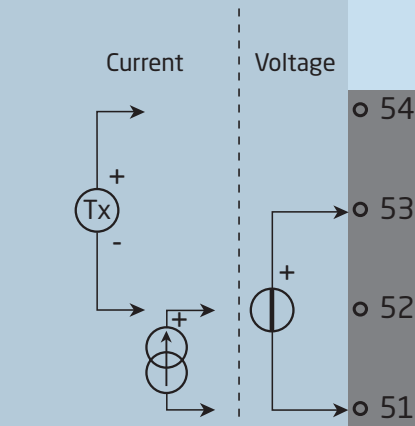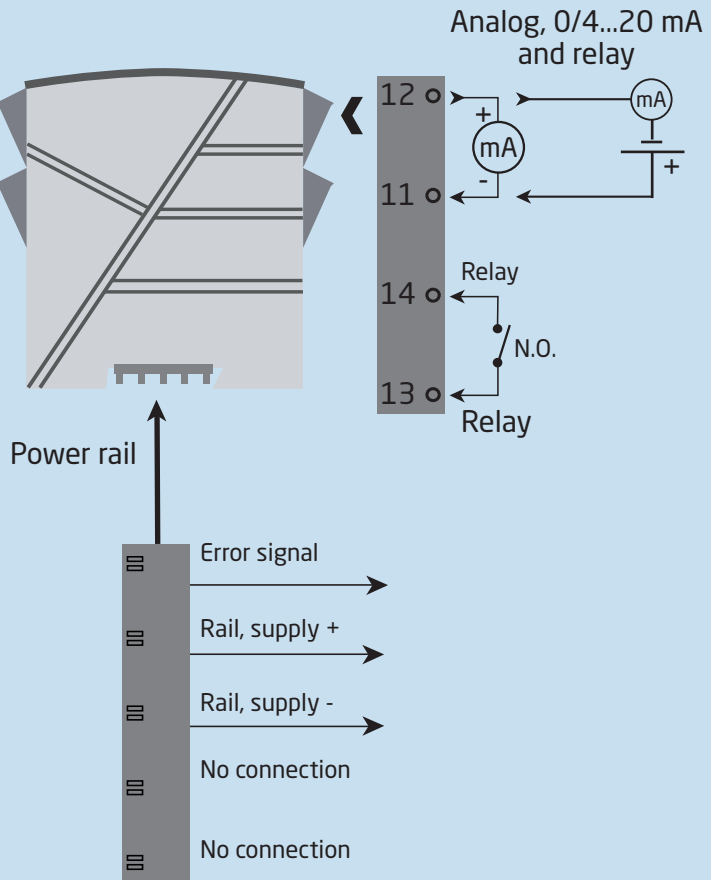

Power connection:

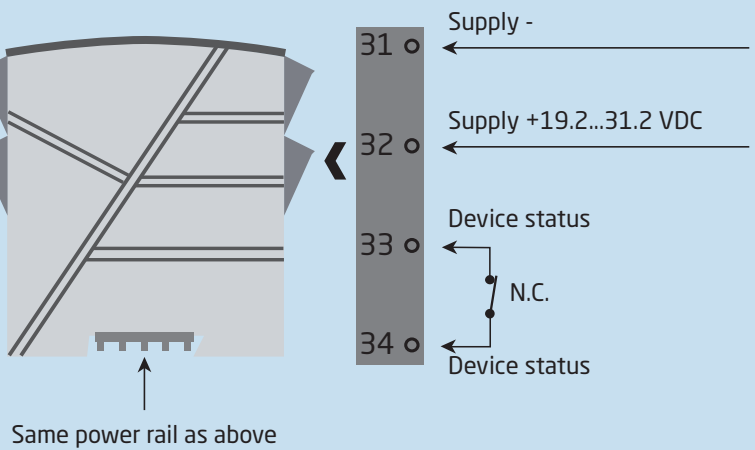

**Zone 0, 1, 2,
20, 21, 22, M1 &
Cl. I/II/III, Div. 1
gr. A-G**

**Zone 2 & Cl. 1, Div. 2, gr. A-D
or Safe Area**

Order

| Type | Associated apparatus | Max. loop voltage | I.S. / Ex approvals |
|------|----------------------|-----------------------------|---|
| 9116 | No : A | U _o 28 VDC : 1 | ATEX, IECEx, FM, INMETRO, EAC-Ex, UKEX :- |
| | Yes : B | U _o 21.4 VDC : 2 | UL 913, ATEX, IECEx, FM, INMETRO, EAC-Ex, UKEX :-U9 KCs, ATEX, IECEx, FM, INMETRO, EAC-Ex, UKEX :- KCs |

Example: 9116B2

Accessories

- 4510 = Display / programming front
- 4511 = Modbus communication enabler
- 4512 = Bluetooth communication enabler
- 5910 = CJC connector for 9116Axx
- 5910Ex = CJC connector for 9116Bxx
- 9400 = Power rail
- 9404 = Module stop for rail
- 9410 = Power control unit
- 9421 = Power supply 24 V - Ex ec nC

Electrical specifications

Environmental conditions

- Operating temperature -20°C to +60°C
- Storage temperature -20°C to +85°C
- Calibration temperature. 20...28°C
- Relative humidity < 95% RH (non-cond.)
- Protection degree IP20
- Installation in Pollution degree 2 & overvoltage category II.

Mechanical specifications

- Dimensions (HxWxD) 109 x 23.5 x 104 mm
- Dimensions (HxWxD) w/ PR 4500 109 x 23.5 x 131 mm
- Weight approx. 185 g
- DIN rail type. DIN EN 60715 - 35 mm
- Wire size. 0.13...2.08 mm² / AWG 26...14 stranded wire
- Screw terminal torque. 0.5 Nm
- Vibration. IEC 60068-2-6
- 2...13.2 Hz ±1 mm
- 13.2...100 Hz. ±0.7 g

Common electrical specifications

- Supply voltage 19.2...31.2 VDC
- Fuse 1.25 A SB / 250 VAC

| Type | Description | Max. power dissipation | Max. required power |
|---------|--------------------------------------|------------------------|---------------------|
| 9116x1x | 1 channel (Ex U _o 28 V) | ≤ 1.7 W | ≤ 2.1 W |
| 9116x2x | 1 channel (Ex U _o 21.4 V) | ≤ 1.7 W | ≤ 2.1 W |

Max. required power is the maximum power needed at terminals 31 and 32.

Max. power dissipation is the maximum power dissipated by the device.

If the 9116 is used with the PR 4500, then add 40 mW to the max. power dissipation and 70 mW to the max. required power for each device with the PR 4500.

Isolation - test / working:

| | |
|---|---|
| Input to any. | 2.6 kVAC / 300 VAC reinforced isolation |
| Analog output to supply | 2.6 kVAC / 300 VAC reinforced isolation |
| Output relay to analog output. | 1.5 kVAC / 150 VAC reinforced isolation or 300 VAC basic isolation |
| Status relay to supply | 1.5 kVAC / 150 VAC reinforced isolation |
| Programming | PR 4500 |
| Signal dynamics, input / output | 24 bit / 16 bit |
| Signal / noise ratio | Min. 60 dB (0...100 kHz) |
| Response time (0...90%, 100...10%): | |
| Temperature input, programmable | 1...60 s |
| mA / V input, programmable | 0.4...60 s |

Accuracy, the greater of the general and basic values:

| General values | | |
|----------------|--------------------------|--------------------------------|
| Input type | Absolute accuracy | Temperature coefficient |
| All | $\leq \pm 0.1\%$ of span | $\leq \pm 0.01\%$ of span / °C |

| Basic values | | |
|---------------------------------|------------------------------|--|
| Input type | Basic accuracy | Temperature coefficient |
| mA | $\leq \pm 16 \mu\text{A}$ | $\leq \pm 1.6 \mu\text{A} / ^\circ\text{C}$ |
| Volt | $\leq \pm 20 \mu\text{V}$ | $\leq \pm 2 \mu\text{V} / ^\circ\text{C}$ |
| Pt100, Pt200, Pt 1000 | $\leq \pm 0.2^\circ\text{C}$ | $\leq \pm 0.02^\circ\text{C}/^\circ\text{C}$ |
| Pt500, Ni100, Ni120, Ni 1000 | $\leq \pm 0.3^\circ\text{C}$ | $\leq \pm 0.03^\circ\text{C}/^\circ\text{C}$ |
| Pt50, Pt400, Ni50 | $\leq \pm 0.4^\circ\text{C}$ | $\leq \pm 0.04^\circ\text{C}/^\circ\text{C}$ |
| Pt250, Pt300 | $\leq \pm 0.6^\circ\text{C}$ | $\leq \pm 0.06^\circ\text{C}/^\circ\text{C}$ |
| Pt20 | $\leq \pm 0.8^\circ\text{C}$ | $\leq \pm 0.08^\circ\text{C}/^\circ\text{C}$ |
| Pt10 | $\leq \pm 1.4^\circ\text{C}$ | $\leq \pm 0.14^\circ\text{C}/^\circ\text{C}$ |
| TC type: E, J, K, L, N, T, U | $\leq \pm 1^\circ\text{C}$ | $\leq \pm 0.1^\circ\text{C}/^\circ\text{C}$ |
| TC type: R, S, W3, W5, LR | $\leq \pm 2^\circ\text{C}$ | $\leq \pm 0.2^\circ\text{C}/^\circ\text{C}$ |
| TC type: B 160...400°C | $\leq \pm 4.5^\circ\text{C}$ | $\leq \pm 0.45^\circ\text{C}/^\circ\text{C}$ |
| TC type: B 400...1820°C | $\leq \pm 2^\circ\text{C}$ | $\leq \pm 0.2^\circ\text{C}/^\circ\text{C}$ |

| | |
|---|-----------------------|
| EMC - immunity influence. | $< \pm 0.5\%$ of span |
| Extended EMC immunity: NAMUR NE 21, A criterion, burst | $< \pm 1\%$ of span |

Auxiliary supplies for 9116x1x:

2-wire supply (terminal 54...52). 28...16.5 VDC / 0...20 mA

Auxiliary supplies for 9116x2x:

2-wire supply (terminal 54...52). 21.4...16.5 VDC / 0...20 mA

RTD, linear resistance and potentiometer input

| Input type | Min. value | Max. value | Standard |
|----------------|------------|------------|-----------|
| Pt100 | -200°C | +850°C | IEC 60751 |
| Ni100 | -60°C | +250°C | DIN 43760 |
| Linear resist. | 0 Ω | 10000 Ω | - |
| Potentiometer | 10 Ω | 10000 Ω | - |

Input for RTD types:

Pt10*, Pt20*, Pt50*, Pt100, Pt200, Pt250, Pt300, Pt400, Pt500, Pt1000

Ni50, Ni100, Ni120, Ni1000

Cable resistance per wire (max.), RTD 50 Ω

Sensor current; RTD Nom. 0.2 mA

Effect of sensor cable resistance (3- / 4-wire), RTD < 0.002 Ω / Ω

Sensor error detection, RTD Programmable ON / OFF

Short circuit detection, RTD Yes

* No short circuit detection for Pt10, Pt20 and Pt50

* No short circuit detection for Lin. $R_{0\%} \leq \text{app. } 18 \Omega$

TC input

| Type | Min. value | Max. value | Standard |
|------|------------|------------|--------------|
| B | 0°C | +1820°C | IEC 60584-1 |
| E | -100°C | +1000°C | IEC 60584-1 |
| J | -100°C | +1200°C | IEC 60584-1 |
| K | -180°C | +1372°C | IEC 60584-1 |
| L | -200°C | +900°C | DIN 43710 |
| N | -180°C | +1300°C | IEC 60584-1 |
| R | -50°C | +1760°C | IEC 60584-1 |
| S | -50°C | +1760°C | IEC 60584-1 |
| T | -200°C | +400°C | IEC 60584-1 |
| U | -200°C | +600°C | DIN 43710 |
| W3 | 0°C | +2300°C | ASTM E988-90 |
| W5 | 0°C | +2300°C | ASTM E988-90 |
| LR | -200°C | +800°C | GOST 3044-84 |

Cold junction compensation (CJC):

via external sensor in connector 5910. 20...28°C ≤ ±1°C

-20...20°C and 28...70°C ≤ ±2°C

via internal CJC sensor ±(2.0°C + 0.4°C * Δt)

Δt = internal temperature - ambient temperature

Sensor error detection Programmable ON or OFF
(only wire breakage)

Sensor error current:

when detecting Nom. 2 μA

else. 0 μA

Current input

Measurement range 0...23 mA

Programmable measurement ranges 0...20 and 4...20 mA

Input resistance Nom. 20 Ω + PTC 50 Ω

Sensor error detection:

Loop break 4...20 mA Yes

NB: Only when input is selected as 4...20 mA

Voltage input

Measurement range 0...12 VDC

Programmable measurement ranges 0...1 / 0.2...1 / 0...5 / 1...5 / 0...10 and 2...10 VDC

Input resistance Nom. >10 MΩ

Current output

Signal range (span) 0...23 mA

Programmable signal ranges 0...20 / 4...20 / 20...0 and 20...4 mA

| | |
|---|-------------------------|
| Load | ≤ 600 Ω |
| Load stability | ≤ 0.01% of span / 100 Ω |
| Sensor error detection | 0 / 3.5 / 23 mA / none |
| NAMUR NE 43 Upscale/Downscale. | 23 mA / 3.5 mA |
| Output limitation: | |
| on 4...20 and 20...4 mA signals | 3.8...20.5 mA |
| on 0...20 and 20...0 mA signals | 0...20.5 mA |
| Current limit. | ≤ 28 mA |


Passive 2-wire output installation

| | |
|--|---------------------------|
| Max. external 2-wire supply | 26 VDC |
| Max. load resistance [Ω]. | (Vsupply - 3.5) / 0.023 A |
| Effect of external 2-wire supply voltage variation | < 0.005% of span / V |

Relay output in safe area

| | |
|--|--|
| Relay functions. | Setpoint, Window, Sensor error, Power and Off |
| Hysteresis, in % of span / display range | 0.1...25 / 1...25 |
| On and Off delay | 0...3600 s |
| Sensor error reaction | Break / Make / Hold |
| Max. voltage | 250 VAC / VDC |
| Max. AC current. | 2 A |
| Max. AC power | 500 VA |
| Max. DC current, resistive load: | |
| @ U _{relay} ≤ 30 VDC | 2 ADC |
| @ U _{relay} > 30 VDC. | [1380 x U _{relay} ⁻² x 1.0085 ^{U_{relay}}] ADC |

Graphic depiction of [1380 x U_{relay}⁻² x 1.0085^{U_{relay}}]:

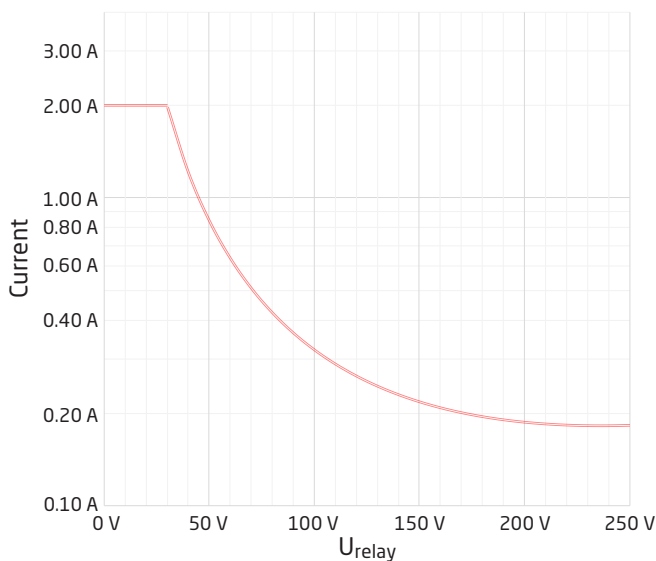

Status relay in safe area

| | |
|-------------------------|-------------------|
| Max. voltage | 125 VAC / 110 VDC |
| Max. current. | 0.5 AAC / 0.3 ADC |
| Max. AC power | 62.5 VA / 32 W |

of span = of the currently selected measurement range

Observed authority requirements

| | |
|----------------|------------------------------|
| EMC | 2014/30/EU & UK SI 2016/1091 |
| ATEX | 2014/34/EU & UK SI 2016/1107 |
| LVD | 2014/35/EU & UK SI 2016/1101 |
| RoHS | 2011/65/EU & UK SI 2012/3032 |

Approvals

| | |
|------------------------------|----------------|
| DNV-GL, Marine. | TAA00000JD |
| ClassNK | TA24034M |
| c UL us, UL 61010-1. | E314307 |
| EAC | TR-CU 020/2011 |
| EAC LVD | TR-CU 004/2011 |
| EAC Ex | TR-CU 012/2011 |

I.S. / Ex

| | |
|--|---|
| ATEX | KEMA 10ATEX0053 X |
| IECEX | IECEX KEM 10.0022X |
| UKEX | DEKRA 21UKEX0177X / DEKRA 23UKEX0104X |
| c FM us. | FM19US0058X / FM19CA0031X |
| INMETRO | DEKRA 23.0006X |
| c UL us, UL 913 (only 9116xx-U9) | E233311 |
| KCs (only 9116xx-KCs) | 21-AV4BO-0176X / 21-AV4BO-0177X / 21-AV4BO-0178X |
| EAC Ex | RU C-DK.HA65.B.00355/19 |

Functional Safety

SIL2 Certified & Fully Assessed acc. to IEC 61508

Configuration of sensor error check

| Sensor error check: | | |
|---------------------|------------------------------|-------------------------|
| Device: | Configuration | Sensor error detection: |
| 9116 | ERR.ACT=NONE - OUT.ERR=NONE. | OFF |
| | Else: | ON |

Visualisation in the PR 4500 of: Input signal outside range

| Outside range readout (IN.LO, IN.HI): If the valid range of the A/D converter or the polynomial is exceeded | | | |
|--|-----------------------|---------|--------------------------|
| Input | Range | Readout | Limit |
| VOLT | 0...1 V / 0.2...1 V | IN.LO | < -25 mV |
| | | IN.HI | > 1.2 V |
| | 0...10 V / 2...10 V | IN.LO | < -25 mV |
| | | IN.HI | > 12 V |
| CURR | 0...20 mA / 4...20 mA | IN.LO | < -1.05 mA |
| | | IN.HI | > 25.05 mA |
| LIN.R | 0...800 Ω | IN.LO | < -10 Ω |
| | | IN.HI | > 900 Ω |
| | 0...10 kΩ | IN.LO | < -10 Ω |
| | | IN.HI | > 11 kΩ |
| POTM | 0 - 100% | IN.LO | < -0.5 % |
| | | IN.HI | > 100.5 % |
| TEMP | TC / RTD | IN.LO | < temperature range -2°C |
| | | IN.HI | > temperature range +2°C |


| Display readout below min. / above max. (-1999, 9999): | | | |
|--|-------|---------|------------------------|
| Input | Range | Readout | Limit |
| All | All | -1999 | Display readout <-1999 |
| | | 9999 | Display readout >9999 |

Sensor error detection


| Sensor error detection (SE.BR, SE.SH): | | | |
|--|------------------------------------|---------|---|
| Input | Range | Readout | Condition |
| CURR | Loop break (4...20 mA) | SE.BR | <= 3.6 mA; > = 21 mA |
| POTM | All, SE.BR on all 3-wire | SE.BR | Sensor broken |
| | | SE.SH | Sensor shorted |
| LIN.R | All | SE.BR | Sensor broken or wire resistance too high |
| | For Lin. R_0% ≥ app. 18 Ω | SE.SH | Sensor shorted |
| TEMP | All | SE.BR | Sensor broken or wire resistance too high |
| | Pt100 to Pt1000 and Ni50 to Ni1000 | SE.SH | Sensor shorted |

Error indications

| Readout at hardware error | | |
|---|----------------|---|
| Error search | Readout | Cause |
| CJC sensor error - check device temperature | CJ.ER | Defect internal CJC sensor or CJC temperature out of allowed range** |
| CJC connector error - check CJC-connector block | CJ.ER | Defect (or missing) CJC-connector or temperature out of allowed range** |
| Input error - check input connection and reset power | IN.ER | Signal levels on input beyond limits or connected to wrong terminals* |
| Output error - check output connections and reset power | AO.ER | Error in analogue output current (SIL mode only)* |
| No communication | NO.CO | No communication with (PR 4500) |
| Flash memory error - check configuration | FL.ER CO.ER | FLASH error (configuration invalid)*** |
| Invalid configuration type or version | TY.ER | Configuration read from EEprom has invalid type or rev. no. |
| Hardware error | RA.ER | RAM error* |
| Hardware error | IF.ER | Internal Flash error* |
| Hardware error | SW.ER | SW monitor error* |
| Hardware error | AD.ER | A/D converter error* |
| Hardware error | AO.SU | Analog output supply error* |
| Hardware error | CA.ER | Factory calibration error* |
| Hardware error | CM.ER | Main CPU error* |
| Hardware error | RE.ER | Relay readback error* |
| Hardware error | II.ER | Initialisation check error* |
| Hardware error | RS.ER | Reset error* |
| Hardware error | IC.ER | Input communication error* |
| Hardware error | M1.ER | Main CPU to Ch. 1 error* |
| Hardware error | MC.ER | Main CPU config. error* |
| Hardware error | MF.ER | Main CPU Flash error* |
| Hardware error | MR.ER | Main CPU RAM error* |
| Hardware error | MS.ER | Main CPU supply error* |
| Hardware error | MP.ER | Main CPU ProgFlow error* |
| Hardware error | MI.ER | Main CPU initialization check error* |
| Hardware error | DE.ER | Device error* |
| Hardware error | FC.ER | Invalid code checksum in PR 4500 |


| | |
|-----|---|
| ! | All error indications in the display flash once per second. The help text explains the error. If the error is a sensor error, the display backlight flashes as well - this is acknowledged (stopped) by pushing the  button. |
| * | Error is acknowledged by resetting the device power. |
| ** | Error can be disregarded by selecting input type different than TC. |
| *** | Error is acknowledged by stepping through the basic setup. |

Connections

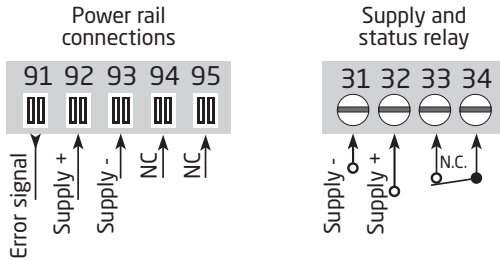


NC = no connection


Inputs:

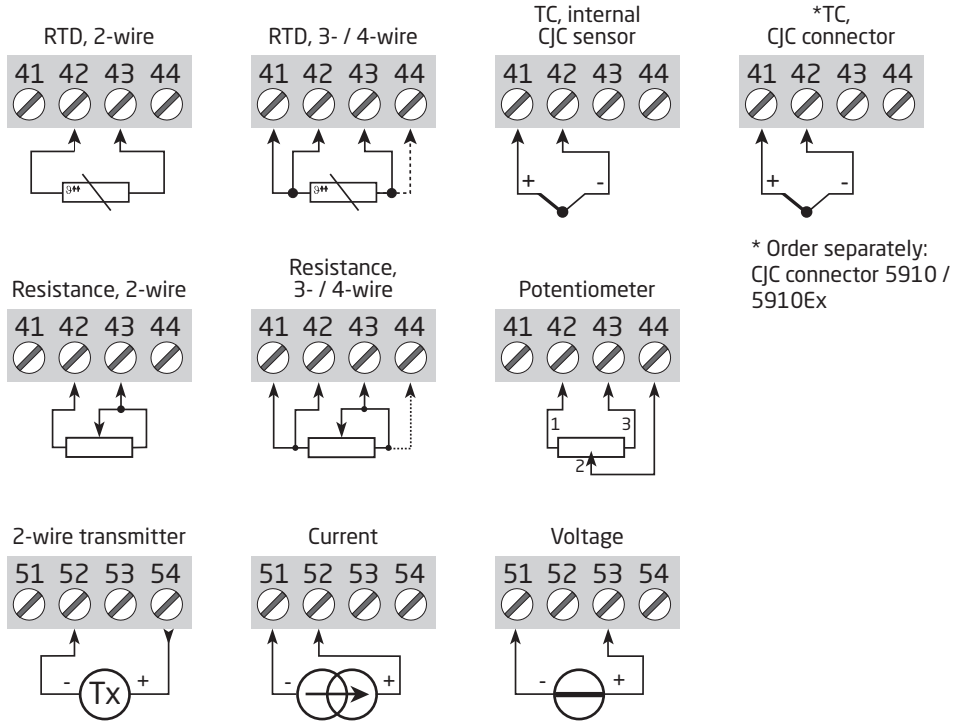

Outputs:

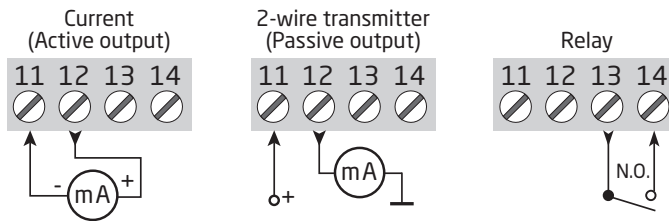

Block diagram

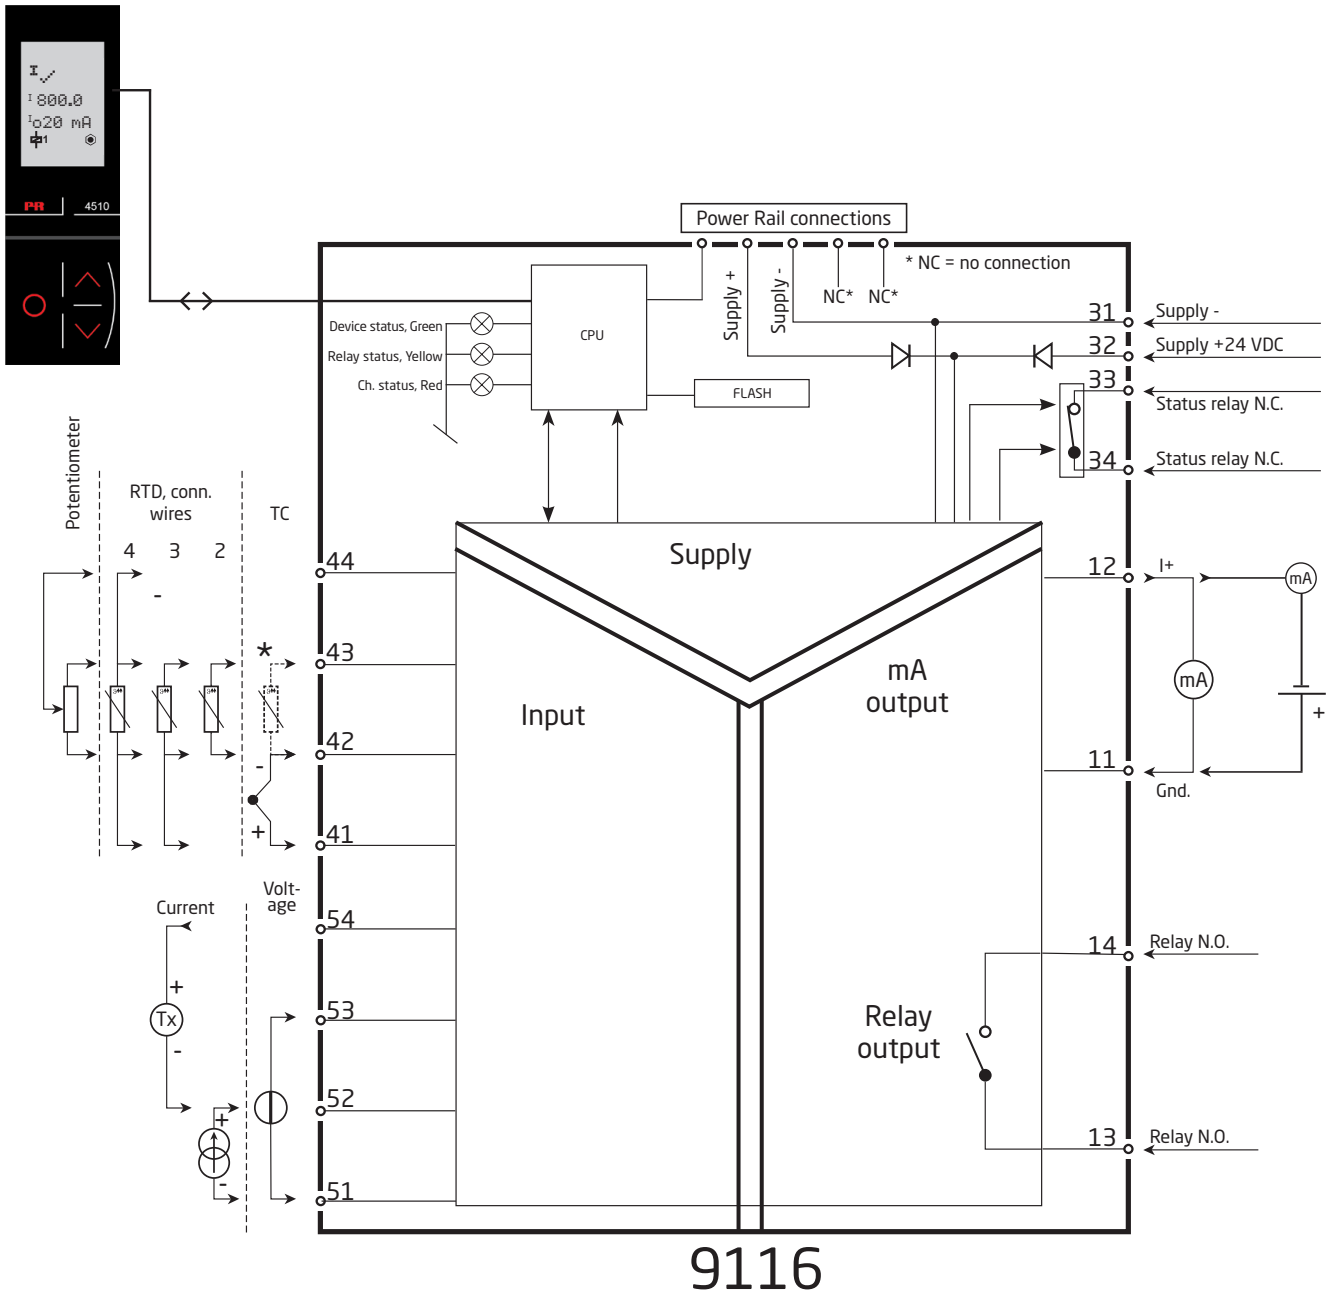

Signal error and cable fault indications without display front

| List of LED and error signal indications | | | | | |
|--|-----------|----------------------|-------------------|--------------------|-----------------------------|
| Condition | Green LED | Relay: Yellow LED | Error: Red LED | Status relay, N.C. | Power rail signal status |
| No supply | OFF | OFF | OFF | De-energized | Closed |
| Device defective | OFF | | ON | De-energized | Closed |
| Device OK | Flashing | | | Energized | Open |
| Signal OK | Flashing | | OFF | Energized | Open |
| Output relay energized | Flashing | ON | OFF | Energized | Open |
| Output relay energized w. wire short/break | Flashing | ON | Flashing | De-energized | Closed (if activated) |
| Output relay de-energized w. wire short/break | Flashing | OFF | Flashing | De-energized | Closed (if activated) |
| Output relay de-energized | Flashing | OFF | OFF | Energized | Open |

Configuration / operating the function keys

Documentation for routing diagram.

In general

When configuring the 9116, you will be guided through all parameters and you can choose the settings which fit the application. For each menu there is a scrolling help text which is automatically shown in line 3 on the display.

Configuration is carried out by use of the 3 function keys:

- ⏪ will increase the numerical value or choose the next parameter
- ⏩ will decrease the numerical value or choose the previous parameter
- ⏹ will save the chosen value and proceed to the next menu

When configuration is completed, the display will return to the default state 1.0. Pressing and holding ⏹ will return to the previous menu or return to the default state (1.0) without saving the changed values or parameters.

If no key is activated for 1 minute, the display will return to the default state (1.0) without saving the changed values or parameters.

Further explanations

Password protection: Programming access can be blocked by assigning a password. The password is saved in the device in order to ensure a high degree of protection against unauthorized modifications to the configuration.

Password protection is mandatory in SIL applications.

If the configured password is not known, please contact PR electronics support - www.prelectronics.com/contact.

Selection of units

After choosing the input signal type you can choose which process units should be shown in the display (see table). By selection of temperature input the process value is always displayed in Celsius or Fahrenheit. This is selected in the menu point after selection of temperature input.

CJC

In the CJC menu you can choose between CJC connector and internal cold junction compensation. The CJC connector (PR 5910 / PR 5910Ex) must be ordered separately.

Signal and sensor error indication via display front PR 4500

Sensor error (see limits in the table) is displayed as SE.BR (sensor break) or SE.SH (sensor short). Signals outside the selected range (not sensor error, see table for limits) are displayed as IN.LO indicating low input signal or IN.HI indicating high input signal. The error indication is displayed as text in line 1 and at the same time the backlight flashes. Line 4 of the display is a status line which shows whether the device is SIL-locked (static dot = SIL-locked and flashing dot = not SIL-locked) as well as relay status and status for communication COM (running circle) indicating correct functioning of PR 4500.

Signal and sensor error indication without display front

Status of the unit can also be read from the 3 LEDs in the front of the device.

Green flashing LED indicates normal operation.

No light in the green LED indicates lack of supply voltage or error in the device.

Steady red LED indicates fatal error.

Flashing red LED indicates sensor error.

Relay functions

5 different settings of relay function can be selected.

Setpoint: The unit works as a single trip amplifier

Window: The relay has a window that is defined by a low and a high setpoint. On both sides of the window the relay has the same status.

Error function: The relay is activated by sensor error.

Power: The relay is activated as long as the power is on.

Off: The relay is deactivated.

Increasing/decreasing: The relay can be set to activate at increasing or decreasing input signal.

Delay: An ON and an OFF delay can be set in the range 0...3600 s.

Hysteresis: A hysteresis can be set at 0.1...25% of the span or between 1 and 25% of display range.

Window: The window function is selected by choosing "window" in the menu and defining a high and a low setpoint. See the graphic depiction of the window functions on page 28.

Setpoint: The setpoint function is selected by choosing "setpoint" in the menu and entering the desired limit. The device then works as a single limit switch. See the graphic depiction of the setpoint functions on page 29.

An activated relay means that the contact is closed if the contact function "normally open" is selected, and the contact is open if the contact function "normally closed" is selected. The delay time for activation and deactivation can be set independently of each other in the menus ON.DEL and OFF DEL respectively.

Advanced functions

The unit gives access to a number of advanced functions which can be reached by answering "Yes" to the point "ADV.SET".

Display setup: Here you can adjust the brightness contrast and the backlight. Setup of TAG numbers with 5 alphanumeric. Input value is always shown in line 2. Selection of functional readout in line 3 of the display - choose between readout of analog output or tag no or alternating display.

Two-point process calibration: The device can be process-calibrated in 2 points to fit a given input signal. A low input signal (not necessarily 0%) is applied and the actual value is entered via PR 4500. Then a high signal (not necessarily 100%) is applied and the actual value is entered via PR 4500. If you accept to use the calibration, the device will work according to this new adjustment. If you later reject this menu point or choose another type of input signal the device will return to factory calibration.

Process simulation function: In the menu point "EN.SIM" it is possible to simulate an input signal by means of the arrow keys and thus control the output signal up or down or the relay state OFF and ON. You must exit the menu by pressing ⓧ (no time-out). The simulation function exits automatically, if the PR 4500 is detached.

Password: Here you can choose a password between 0000 and 9999 in order to protect the unit against unauthorised modifications to the configuration. The unit is delivered default without password.


Memory: In the memory menu you can save the configuration of the device in the PR 4500, and then move the PR 4500 onto another device of the same type and download the configuration in the new device.

Language: In the menu "LANG" you can choose between 7 different language versions of help texts that will appear in the menu. You can choose between UK, DE, FR, IT, ES, SE and DK.

Power rail: In the menu "RAIL" you can choose if sensor errors are transmitted to the central surveillance in the PR 9410 power control unit.

Safety Integrity Level (SIL): See Safety Manual for details.




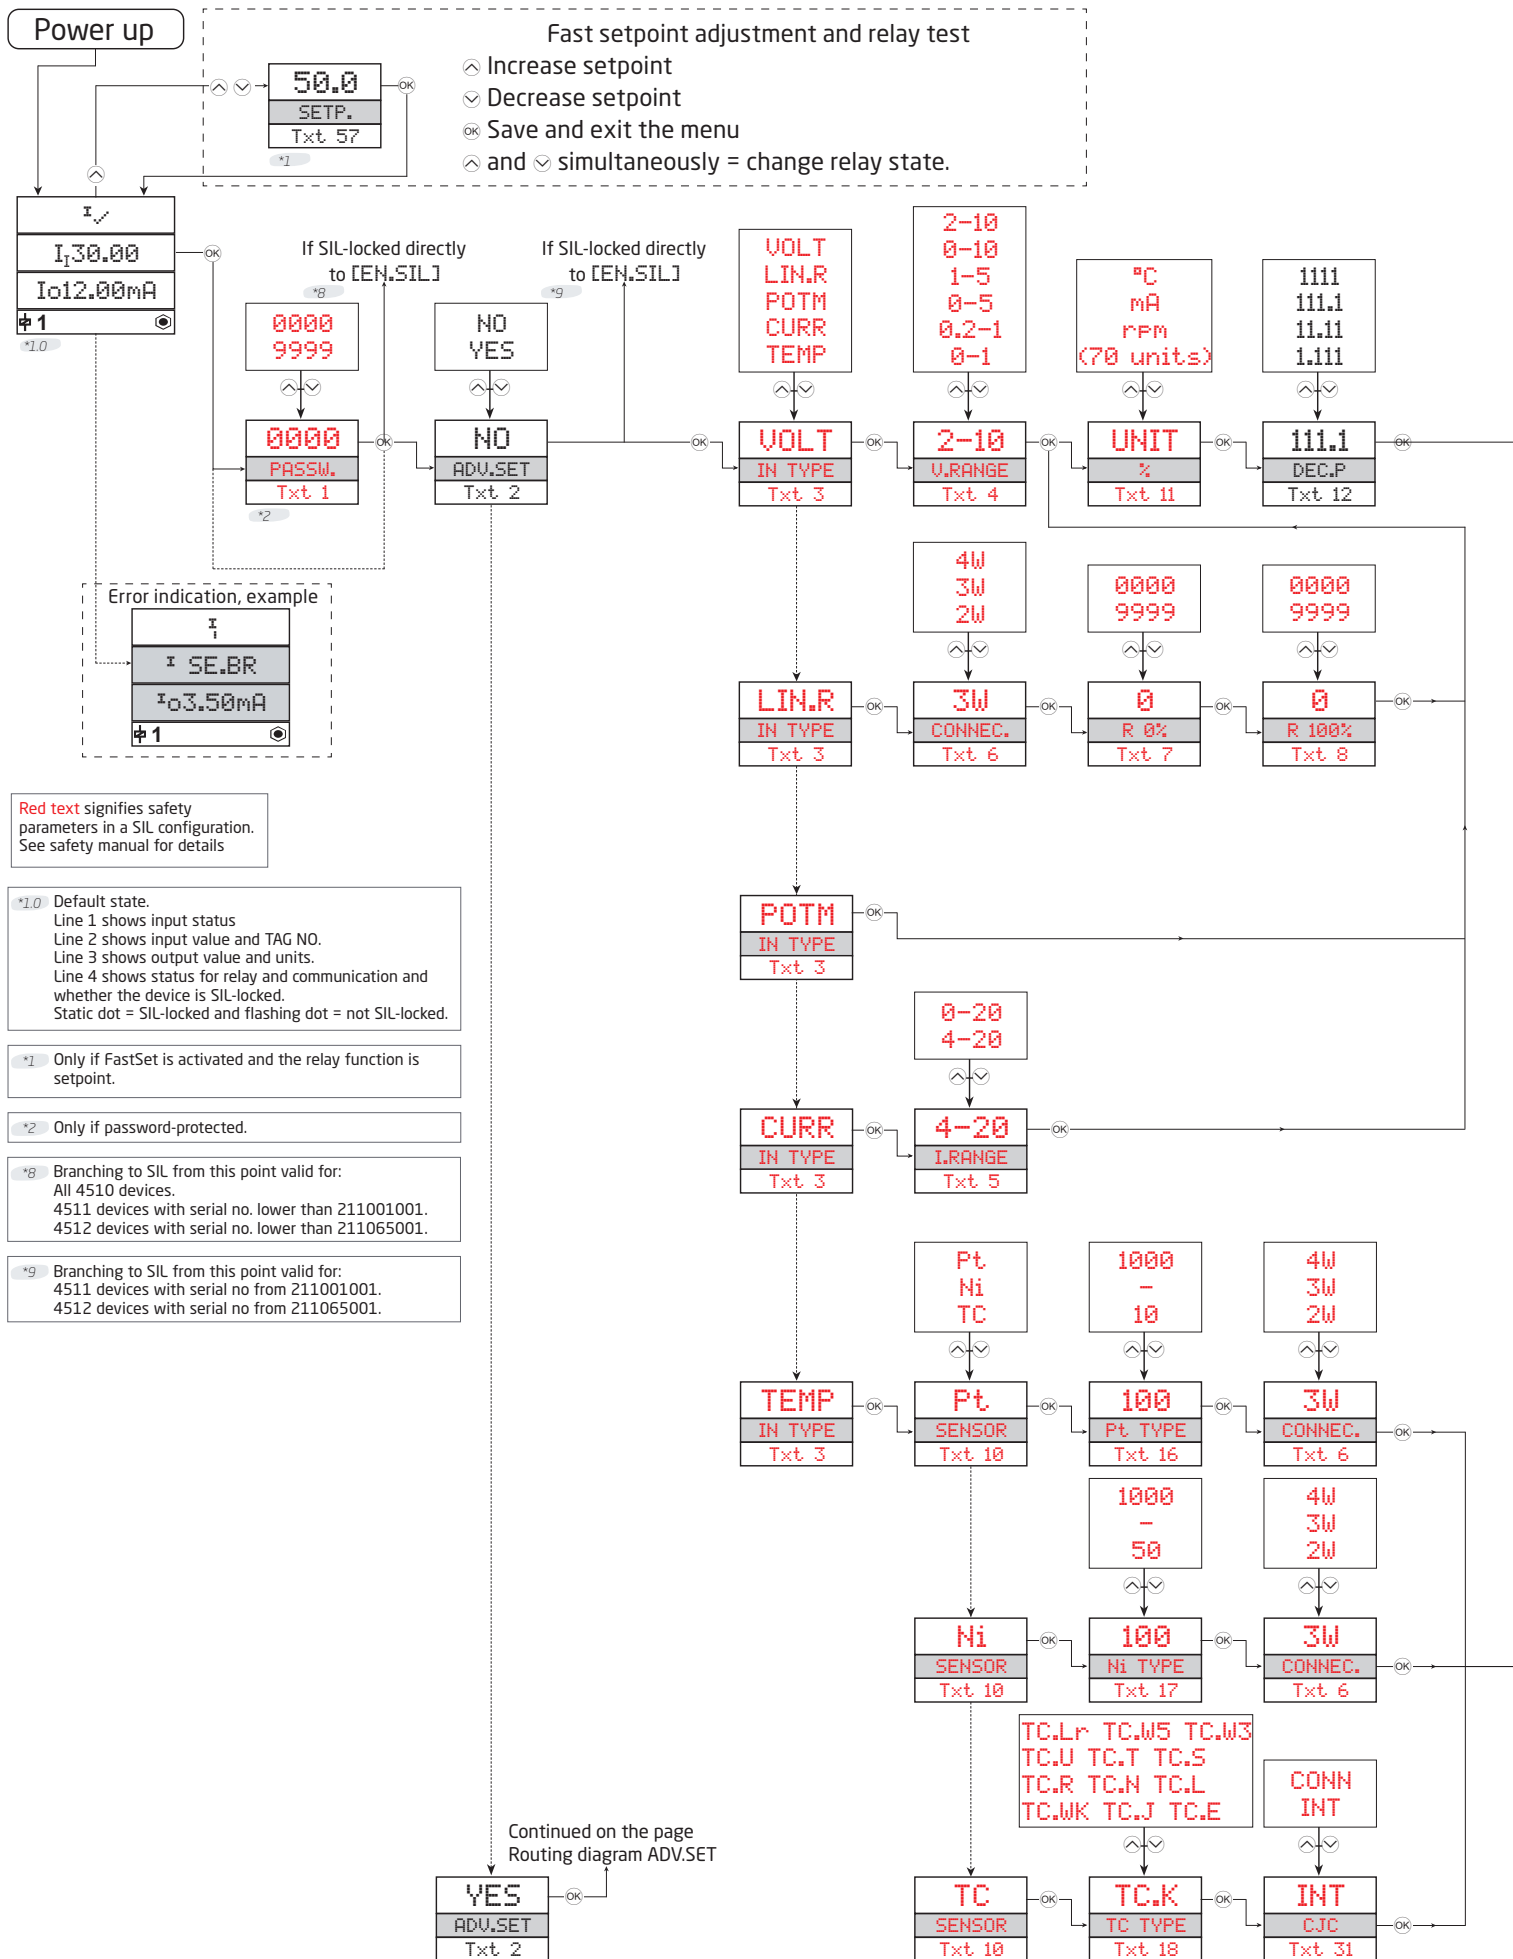


Routing diagram

If no key is activated for 1 minute, the display will return to the default state 1.0 without saving configuration changes.

- ⬆ Increase value / choose next parameter
- ⬇ Decrease value / choose previous parameter
- Ⓚ Save the chosen value and proceed to the next menu
- Hold Ⓚ Back to previous menu / return to menu 1.0 without saving.

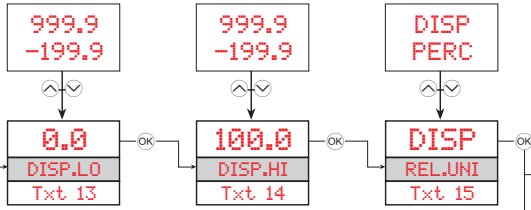


Continued on the next page

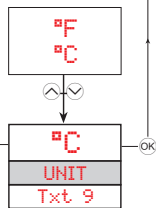

Selectable UNITS:

| | | | | |
|----------------|------------------|------|------|---------------------|
| °C | s | rPM | MU/h | ohm |
| °F | min | Hz | kU/h | S |
| K | m/s | t | U | uS |
| % | mm/s | kg | GU | m ³ /min |
| m | m/min | g | MU | m ³ /h |
| cm | m/h | N | kU | l/s |
| mm | in/s | Pa | hP | l/min |
| um | ips | MPa | A | l/h |
| ft | ft/s | kPa | kA | gal/min |
| in | in/min | hPa | mA | gal/h |
| mils | ft/min | bar | uA | t/h |
| yd | in/h | mbar | U | mol |
| m ³ | ft/h | kJ | kU | PH |
| l | m/s ² | Uh | mU | [blank] |

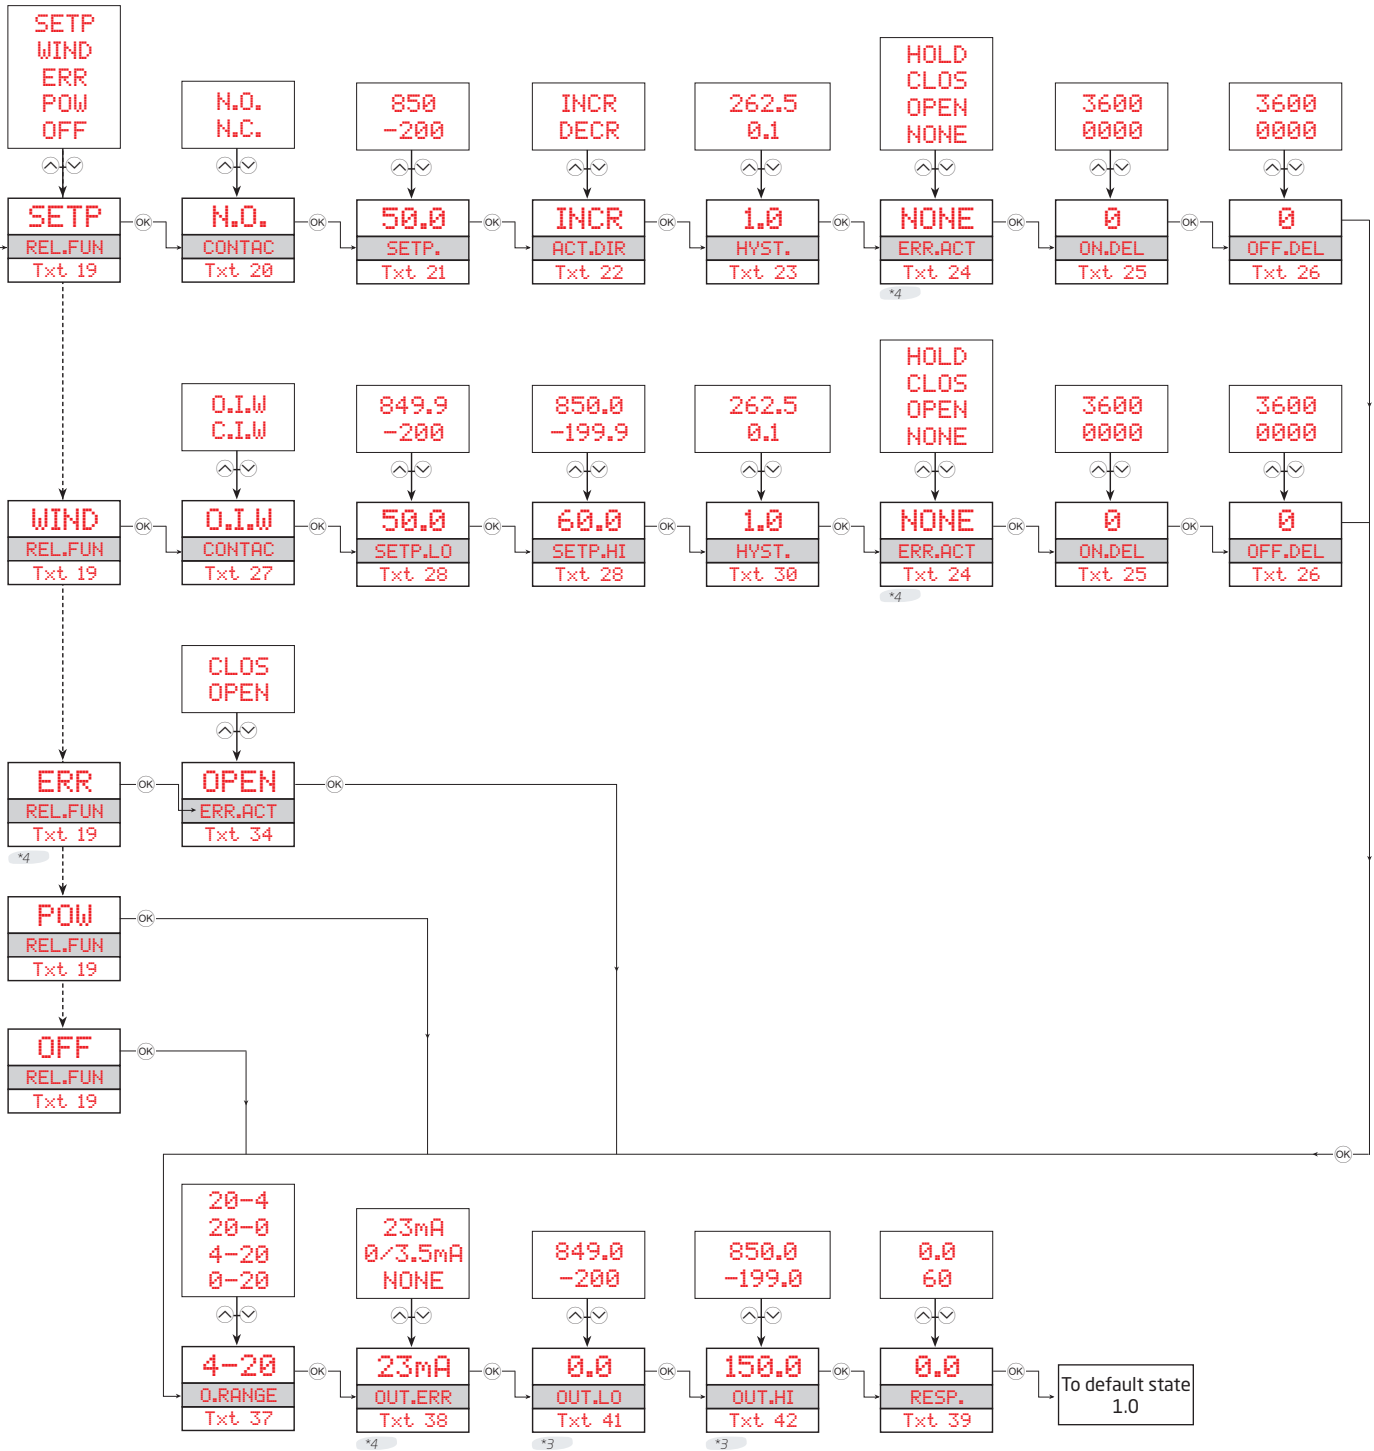


*3 Only if input signal is temperature.

*6 If password has been set.

*4 Only if input types support sensor error check.
Not valid for these input signals: 0...20 mA and voltage.

*10 Not available on PR 4500 if SIL-locked.
Only for 4512 devices with serial no. from 211065001 and
for 4511 devices with serial no. from 211001001.

Routing diagram, advanced settings (ADV.SET)

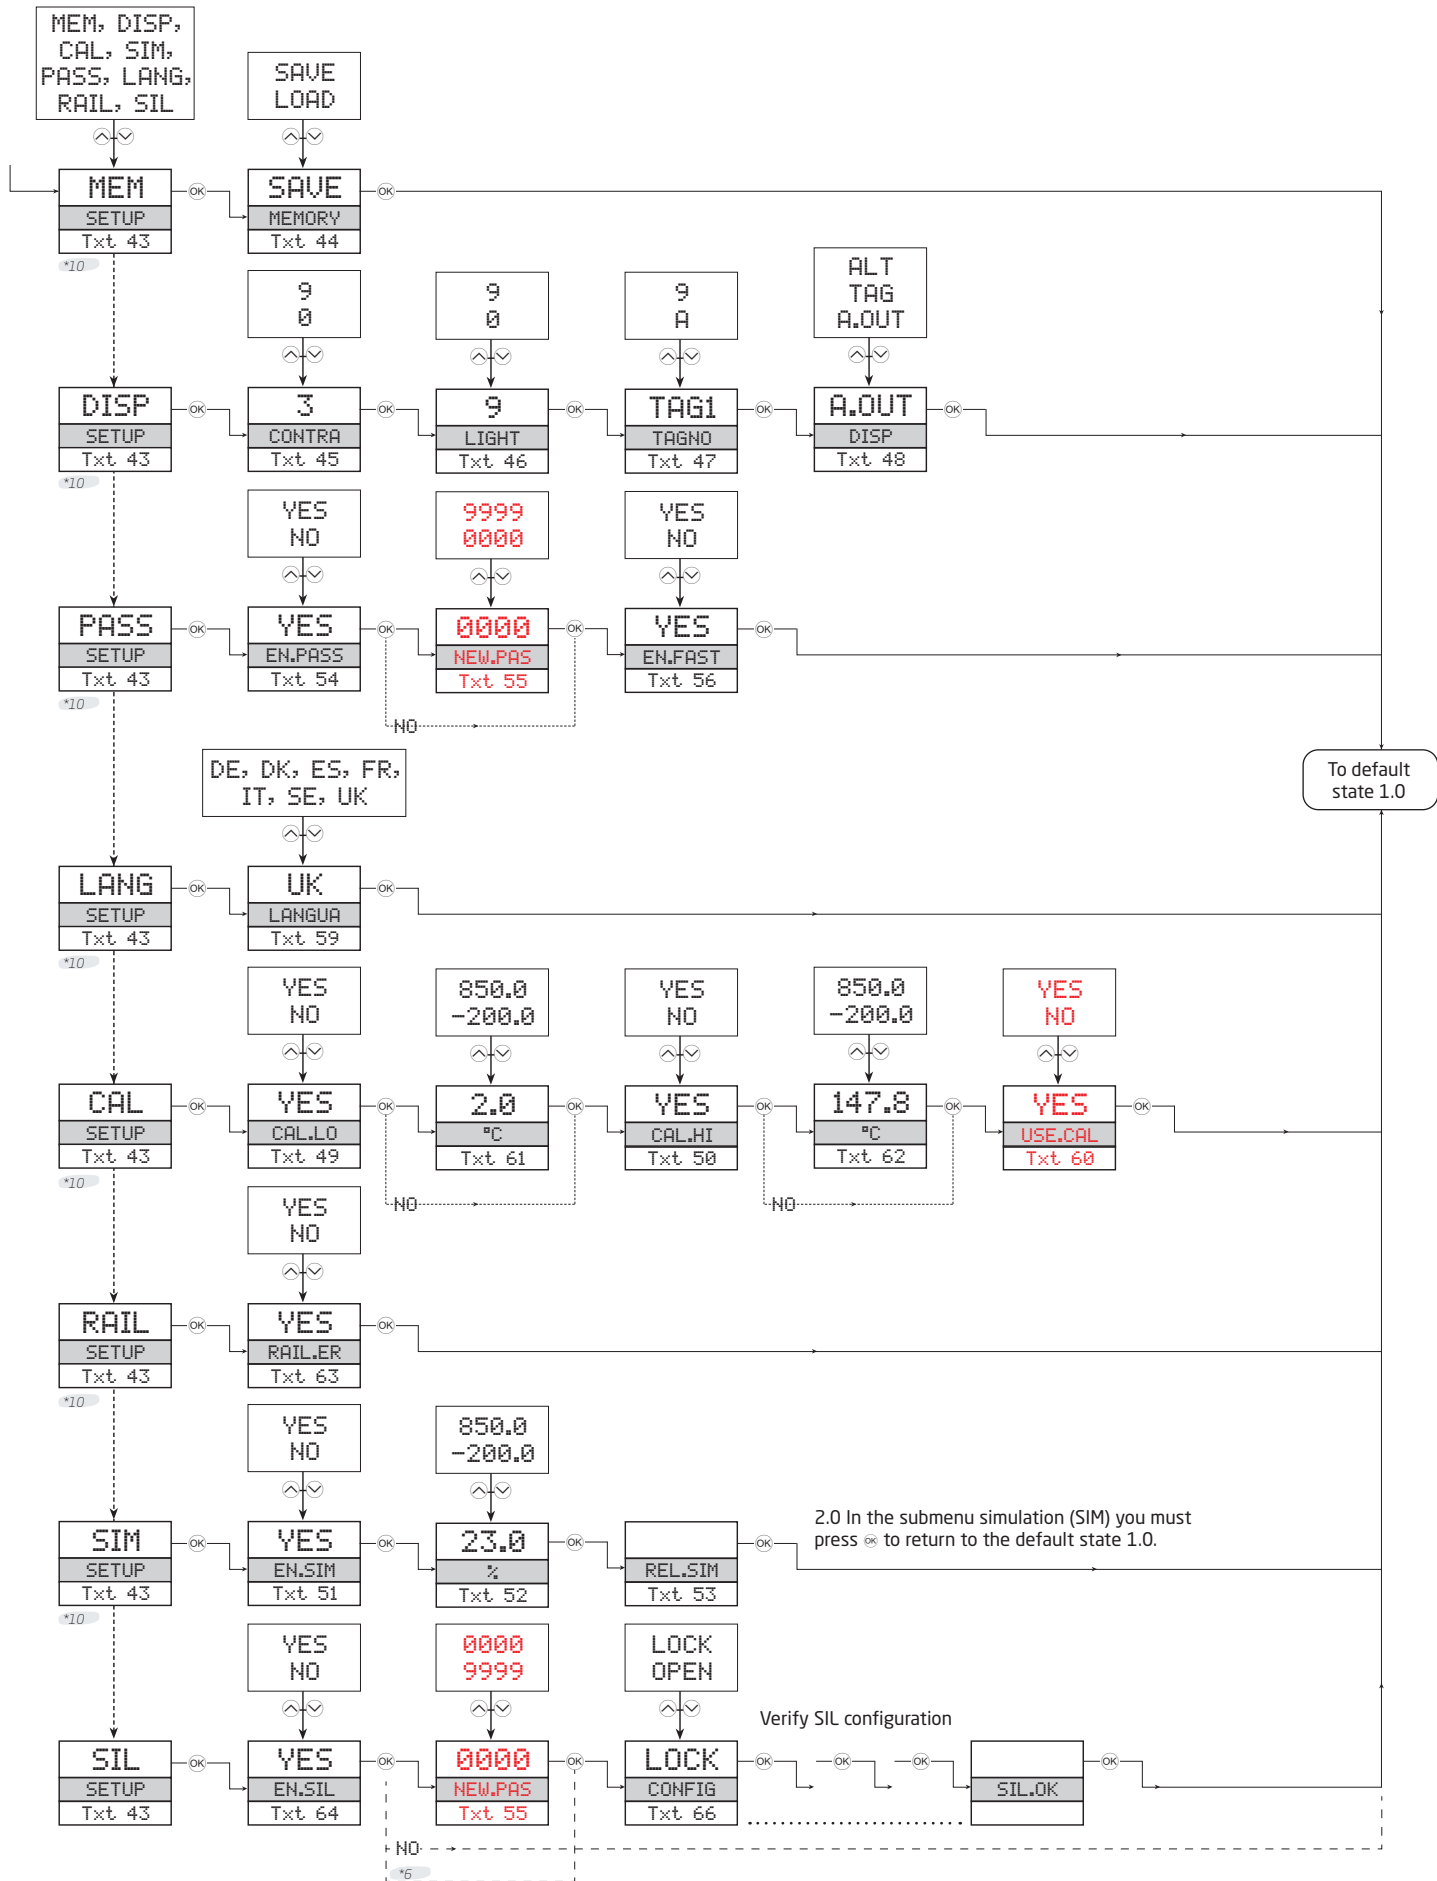


Help text overview


- [01] Set correct password
- [02] Enter Advanced setup menu?
- [03] Select Temperature input
 - Select Potentiometer input
 - Select Linear resistance input
 - Select Current input
 - Select Voltage input
- [04] Select 0.0-1 V input range
 - Select 0.2-1 V input range
 - Select 0-5 V input range
 - Select 1-5 V input range
 - Select 0-10 V input range
 - Select 2-10 V input range
- [05] Select 0-20 mA input range
 - Select 4-20 mA input range
- [06] Select 2-Wire sensor connection
 - Select 3-Wire sensor connection
 - Select 4-Wire sensor connection
- [07] Set Resistance value low
- [08] Set Resistance value high
- [09] Select Celsius as temperature unit
 - Select Fahrenheit as temperature unit
- [10] Select TC sensor type
 - Select Ni sensor type
 - Select Pt sensor type
- [11] Select Display unit
- [12] Select Decimal point position
- [13] Set Display range low
- [14] Set Display range high
- [15] Select Relay setpoint in % of input range
 - Select Relay setpoint in display units
- [16] Select Pt10 sensor type
 - Select Pt20 sensor type
 - Select Pt50 sensor type
 - Select Pt100 sensor type
 - Select Pt200 sensor type
 - Select Pt250 sensor type
 - Select Pt300 sensor type
 - Select Pt400 sensor type
 - Select Pt500 sensor type
 - Select Pt1000 sensor type
- [17] Select Ni50 sensor type
 - Select Ni100 sensor type
 - Select Ni120 sensor type
 - Select Ni1000 sensor type
- [18] Select TC-B sensor type
 - Select TC-E sensor type
 - Select TC-J sensor type
 - Select TC-K sensor type
 - Select TC-L sensor type
 - Select TC-N sensor type
 - Select TC-R sensor type
 - Select TC-S sensor type
 - Select TC-T sensor type
 - Select TC-U sensor type
 - Select TC-W3 sensor type
 - Select TC-W5 sensor type
 - Select TC-Lr sensor type
- [19] Select OFF function - relay is permanently off
 - Select POWER function - relay indicates power status OK
 - Select ERROR function - relay indicates sensor error only
 - Select WINDOW function - relay is controlled by 2 setpoints
 - Select SETPOINT function - relay is controlled by 1 setpoint
- [20] Select Normally Closed contact
 - Select Normally Open contact
- [21] Set Relay setpoint
- [22] Select Action on decreasing signal
 - Select Action on increasing signal
- [23] Set Relay hysteresis
- [24] Select No error action - undefined status at error
 - Select Open relay contact at error
 - Select Close relay contact at error
 - Select Hold relay status at error
- [25] Set Relay ON delay in seconds
- [26] Set Relay OFF delay in seconds
- [27] Select Contact is Closed Inside Window
 - Select Contact is Open Inside Window
- [28] Set Relay window setpoint low
- [29] Set Relay window setpoint high
- [30] Set Relay window hysteresis
- [31] Select Internal temperature sensor
 - Select CJC connector (Accessory)
- [34] Select Open relay contact at error
 - Select Close relay contact at error
- [37] Select 0-20 mA output range
 - Select 4-20 mA output range
 - Select 20-0 mA output range
 - Select 20-4 mA output range
- [38] Select No error action - output undefined at error
 - Select Downscale at error
 - Select Namur NE43 downscale at error
 - Select Namur NE43 upscale at error
- [39] Select Analogue output response time in seconds.
- [41] Set Temperature for analogue output low
- [42] Set Temperature for analogue output high
- [43] Enter SIL setup
 - Enter Simulation mode
 - Enter Rail setup
 - Perform Process Calibration
 - Enter Language setup
 - Enter Password setup
 - Enter Display setup
 - Perform Memory operations
- [44] Load saved configuration into module
 - Save configuration in display front
- [45] Adjust LCD contrast
- [46] Adjust LCD backlight
- [47] Write a 5-character channel TAG
- [48] Show Analog output value in display
 - Show TAG on display
 - Alternate shown information in display

- [49] Calibrate Input low to process value?
- [50] Calibrate Input high to process value?
- [51] Enable input simulation?
- [52] Set the input simulation value
- [53] Relay simulation - use ⏪ to toggle relay
- [54] Enable Password protection?
- [55] Set New password
- [56] Enable Fastset functionality?
- [57] Relay setpoint - press OK to save
- [58] Relay setpoint - Read only
- [59] Select Language
- [60] Use process calibration values?
- [61] Set value for low calibration point
- [62] Set value for high calibration point
- [63] Enable Rail status signal output?
- [64] Enable SIL configuration lock?
0...20 mA is not a valid output range for SIL operation
- [66] Configuration SIL status (Open / Locked)
- [80] Sensor short circuit
- [81] Sensor wire breakage
- [82] Display underrange
- [83] Display overrange
- [84] Input underrange
- [85] Input overrange
- [86] Input error - check input connections and reset power
- [87] Output error - check connentions and reset power
- [88] Flash memory error - chek configuration
- [89] Invalid configuration type or version
- [90] Hardware error
- [91] CJC sensor error - check device temperature
- [92] CJC error - check CJC connector block
- [93] No communication

Graphic depiction of window

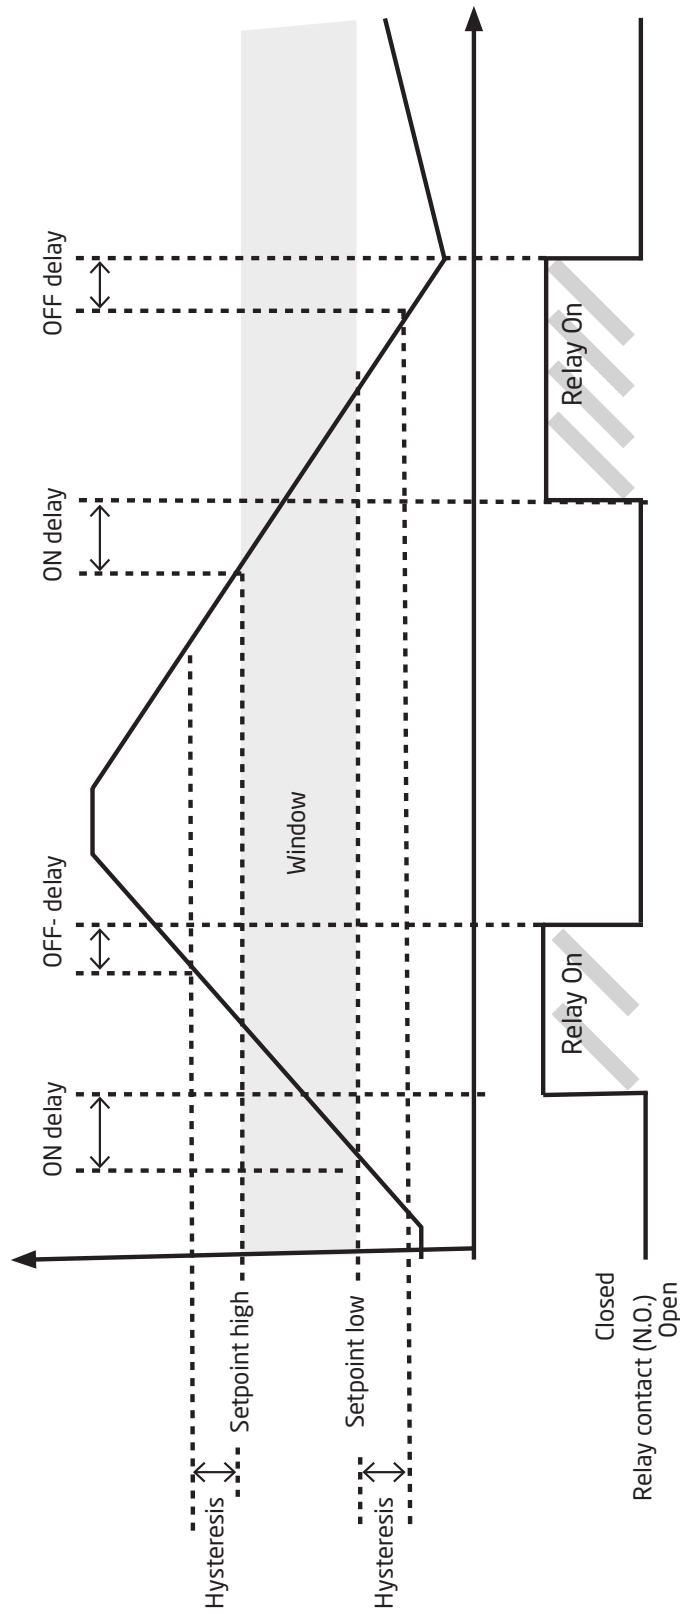

Graphic depiction of setpoint

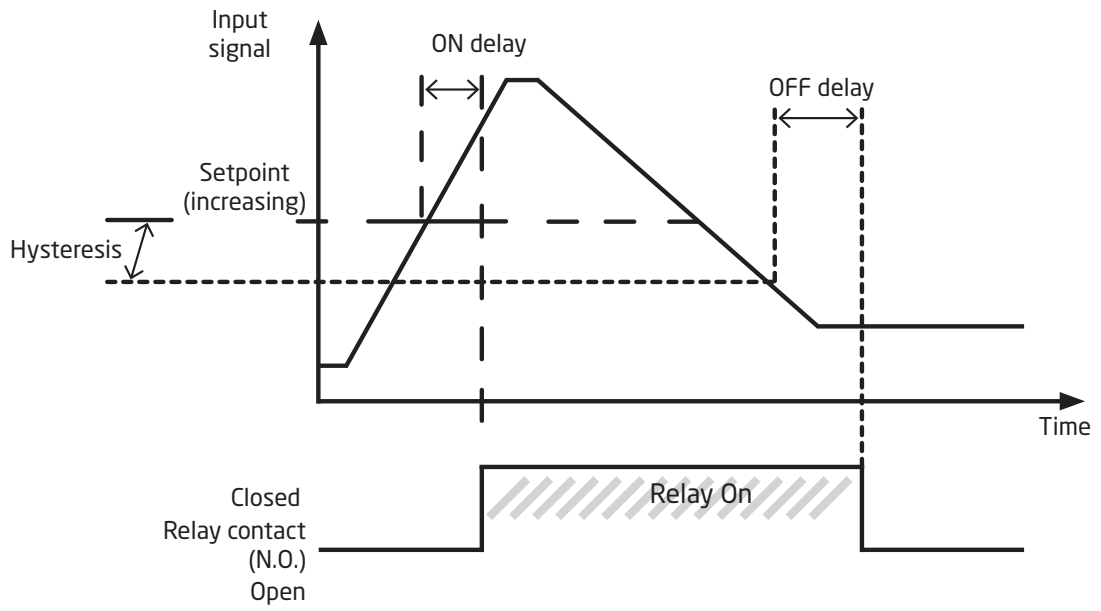

LERBAKKEN 10, 8410 ROENDE DENMARK

IECEX Installation drawing



For safe installation of 9116 the following must be observed. The module shall only be installed by qualified personnel who are familiar with the national and international laws, directives and standards that apply to this area.

Year of manufacture can be taken from the first two digits in the serial number.



For Installation in Zone 2 the following must be observed.

The 4501 programming module is to be used solely with PR electronics modules. It is important that the module is undamaged and has not been altered or modified in any way. Only 4501 modules free of dust and moisture shall be installed.

| | |
|----------------------------------|---|
| IECEX Certificate: | KEM 10.0022X |
| Marking 9116Bxx: | [Ex ia Ga] IIC/IIB/IIA [Ex ia Da] IIIC [Ex ia Ma] I |
| Marking 9116Bxx, 9116Axx: | Ex ec nC IIC T4 Gc |
| Standards | IEC60079-0:2017, IEC60079-11:2011, IEC60079-15:2017, IEC60079-7:2015+A1:2017 |

9116Bxx Installation:

Hazardous area
Zone 0, 1, 2, 20, 21 and 22

Non Hazardous area
or Zone 2

$-20 \leq T_a \leq +60^\circ\text{C}$



Supply terminal (31,32)
Voltage: 19.2 – 31.2 VDC

Status relay, terminal (33,34)
Zone 2 installation:
Voltage max: 32 VAC / 32 VDC
Power max: 16 VA / 32 W
Current max: 0.5 A AC / 1 A DC

Relay output, terminal (13,14)
Zone 2 installation
Voltage max: 32 V AC / 30 VDC
Power max: 64 VA / 60 W
Current max: 2 A AC / 2 ADC

(terminal 11,12,13,14)
(terminal 31,32,33,34)
(terminal 91,92,93,94,95)
U_m: 253 V max. 400 Hz

LERBAKKEN 10, 8410 ROENDE DENMARK

| | |
|-----------------------|--------|
| Module 9116B1 | |
| Terminal 51-52, 51-53 | |
| Ui | 30 V |
| Ii | 120 mA |
| Pi | 900 mW |
| Ci | 3 nF |
| Li | 1 µH |

| | |
|-----------------------|--------|
| Module 9116B2 | |
| Terminal 51-52, 51-53 | |
| Ui | 30 V |
| Ii | 120 mA |
| Pi | 900 mW |
| Ci | 3 nF |
| Li | 1 µH |

| | | | | | |
|-----------------------|--------|-------|--------|-------|----------|
| Module 9116B1 | | Group | Co | Lo | Lo/Ro |
| Terminal 51-54, 52-54 | | | | | |
| Uo | 28 V | IIC | 80 nF | 4 mH | 54 µH/Ω |
| Io | 93 mA | IIB | 640 nF | 16 mH | 218 µH/Ω |
| Po | 650 mW | IIA | 2.1 µF | 32 mH | 436 µH/Ω |

| | | | | | |
|-----------------------|--------|-------|---------|-------|----------|
| Module 9116B2 | | Group | Co | Lo | Lo/Ro |
| Terminal 51-54, 52-54 | | | | | |
| Uo | 21.4 V | IIC | 0.16 µF | 4 mH | 54 µH/Ω |
| Io | 93 mA | IIB | 1.13 µF | 16 mH | 218 µH/Ω |
| Po | 650 mW | IIA | 4.15 µF | 32 mH | 436 µH/Ω |

| | | | | | |
|----------------|--------|-------|--------|---------|---------|
| Module 9116B1 | | Group | Co | Lo | Lo/Ro |
| Terminal 51-53 | | | | | |
| Uo | 28 V | IIC | 80 nF | 1000 mH | 4 mH/Ω |
| Io | 1.1 mA | IIB | 640 nF | 1000 mH | 17 mH/Ω |
| Po | 8 mW | IIA | 2.1 µF | 1000 mH | 35 mH/Ω |

| | | | | | |
|----------------|--------|-------|---------|---------|---------|
| Module 9116B2 | | Group | Co | Lo | Lo/Ro |
| Terminal 51-53 | | | | | |
| Uo | 21.4 V | IIC | 0.16 µF | 1000 mH | 4 mH/Ω |
| Io | 1.1 mA | IIB | 1.13 µF | 1000 mH | 17 mH/Ω |
| Po | 8 mW | IIA | 4.15 µF | 1000 mH | 35 mH/Ω |

| | | | | | |
|----------------|--------|-------|---------|---------|----------|
| Module 9116B1 | | Group | Co | Lo | Lo/Ro |
| Terminal 51-52 | | | | | |
| Uo | 8.3 V | IIC | 7 µF | 1000 mH | 100 mH/Ω |
| Io | 0.2 mA | IIB | 73 µF | 1000 mH | 400 mH/Ω |
| Po | 0.4 mW | IIA | 1000 µF | 1000 mH | 800 mH/Ω |

| | | | | | |
|----------------|--------|-------|---------|---------|----------|
| Module 9116B2 | | Group | Co | Lo | Lo/Ro |
| Terminal 51-52 | | | | | |
| Uo | 8.3 V | IIC | 7 µF | 1000 mH | 100 mH/Ω |
| Io | 0.2 mA | IIB | 73 µF | 1000 mH | 400 mH/Ω |
| Po | 0.4 mW | IIA | 1000 µF | 1000 mH | 800 mH/Ω |

| | | | | | |
|----------------------|---------|-------|---------|---------|---------|
| Module 9116B1 | | Group | Co | Lo | Lo/Ro |
| Terminal 41,42,43,44 | | | | | |
| Uo | 8.3 V | IIC | 7 µF | 207 mH | 1 mH/Ω |
| Io | 13.1 mA | IIB | 73 µF | 828 mH | 5 mH/Ω |
| Po | 27.3 mW | IIA | 1000 µF | 1000 mH | 10 mH/Ω |

| | | | | | |
|----------------------|---------|-------|---------|---------|---------|
| Module 9116B2 | | Group | Co | Lo | Lo/Ro |
| Terminal 41,42,43,44 | | | | | |
| Uo | 8.3 V | IIC | 7 µF | 207 mH | 1 mH/Ω |
| Io | 13.1 mA | IIB | 73 µF | 828 mH | 5 mH/Ω |
| Po | 27.3 mW | IIA | 1000 µF | 1000 mH | 10 mH/Ω |

Installation notes:

For group I (mines), the parameters for group IIA apply.

Install in pollution degree 2, overvoltage category II as defined in IEC60664-1

Do not separate connectors when energized and an explosive gas mixture is present.

Do not mount or remove modules from the Power Rail when an explosive gas mixture is present.

Disconnect power before servicing.

The wiring of unused terminals is not allowed.

In type of protection [Ex ia Da] the parameters for intrinsic safety for gas group IIB are applicable.

For installation in Zone 2, the module shall be installed in an enclosure in type of protection Ex n or Ex e, providing a degree of protection of at least IP54. Cable entry devices and blanking elements shall fulfill the same requirements.

For installation on Power Rail in Zone 2, only Power Rail type 9400 supplied by Power Control Unit type 9410 (Type Examination Certificate KEMA 07ATEX0152 X) is allowed.

Max. screw terminal torque 0.5 Nm.


Stranded wire should be installed with an insulation stripping length of 5 mm or via a suitable insulated terminal such as a bootlace ferrule.

LERBAKKEN 10, 8410 ROENDE DENMARK

9116Bxx Installation:

Hazardous area
Zone 0,1,2, 20, 21, 22

Non Hazardous area
or Zone 2

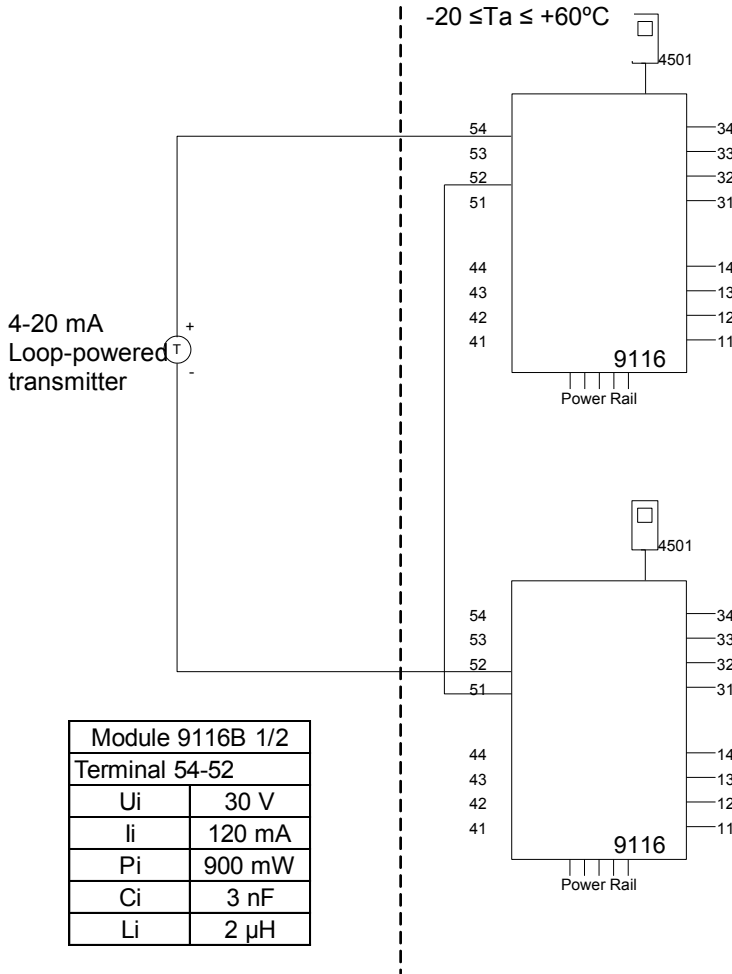

| Module 9116B 1/2 | |
|------------------|--------|
| Terminal 54-52 | |
| U _i | 30 V |
| i _i | 120 mA |
| P _i | 900 mW |
| C _i | 3 nF |
| L _i | 2 μH |

Supply terminal (31,32)
Voltage: 19.2 – 31.2 VDC

Status relay, terminal (33,34)
Zone 2 installation:
Voltage max: 32 VAC/ 32 VDC
Power max: 16 VA / 32 W
Current max: 0.5 A AC / 1 A DC

Relay output, terminal (13,14)
Zone 2 installation
Voltage max: 32 V AC / 30 VDC
Power max: 64 VA / 60 W
Current max: 2 A AC / 2 ADC

(terminal 11,12,13,14)
(terminal 31,32,33,34)
(terminal 91,92,93,94,95)
U_m: 253 V max. 400 Hz

| Module 9116B1 | | Group | Co | Lo | Lo/Ro |
|--------------------|--------|-------|--------|-------|----------|
| Term. 54-52; 51-52 | | | | | |
| U _o | 28 V | IIC | 80 nF | 4 mH | 54 μH/Ω |
| i _o | 93 mA | IIB | 640 nF | 16 mH | 218 μH/Ω |
| P _o | 650 mW | IIA | 2.1 μF | 32 mH | 436 μH/Ω |

| Module 9116B2 | | Group | Co | Lo | Lo/Ro |
|--------------------|--------|-------|---------|-------|----------|
| Term. 54-52; 51-52 | | | | | |
| U _o | 21.4 V | IIC | 0.16 μF | 4 mH | 54 μH/Ω |
| i _o | 93 mA | IIB | 1.13 μF | 16 mH | 218 μH/Ω |
| P _o | 650 mW | IIA | 4.15 μF | 32 mH | 436 μH/Ω |

LERBAKKEN 10, 8410 ROENDE DENMARK

9116Bxx Installation:

Hazardous area
Zone 0, 1, 2, 20, 21, 22

Non Hazardous area
or Zone 2

-20 ≤ Ta ≤ +60°C



Supply terminal (31,32)
Voltage: 19.2 – 31.2 VDC

Status relay, terminal (33,34)
Zone 2 installation:
Voltage max: 32 VAC / 32 VDC
Power max: 16 VA / 32 W
Current max: 0.5 A AC / 1 A DC

Relay output, terminal (13,14)
Zone 2 installation
Voltage max: 32 V AC / 30 VDC
Power max: 64 VA / 60 W
Current max: 2 A AC / 2 ADC

(terminal 11,12,13,14)
(terminal 31,32,33,34)
(terminal 91,92,93,94,95)
U_m: 253 V max. 400 Hz


| Module 9116B 1/2 | |
|------------------|--------|
| Terminal 51-52 | |
| U _i | 30 V |
| I _i | 120 mA |
| P _i | 900 mW |
| C _i | 3 nF |
| L _i | 2 μH |

| Module 9116B 1/2 | | Group | Co | Lo | Lo/Ro |
|--------------------|--------|-------|--------|--------|---------|
| Term. 52-51, 51-52 | | | | | |
| U _o | 16.6 V | IIC | 0.4 μF | 100 mH | 25mH/Ω |
| I _o | 0.2 mA | IIB | 2.3 μF | 100 mH | 100mH/Ω |
| P _o | 0.8 mW | IIA | 9.5 μF | 100 mH | 200mH/Ω |

LERBAKKEN 10, 8410 ROENDE DENMARK

9116Axx Installation:

Non Hazardous area or Zone 2

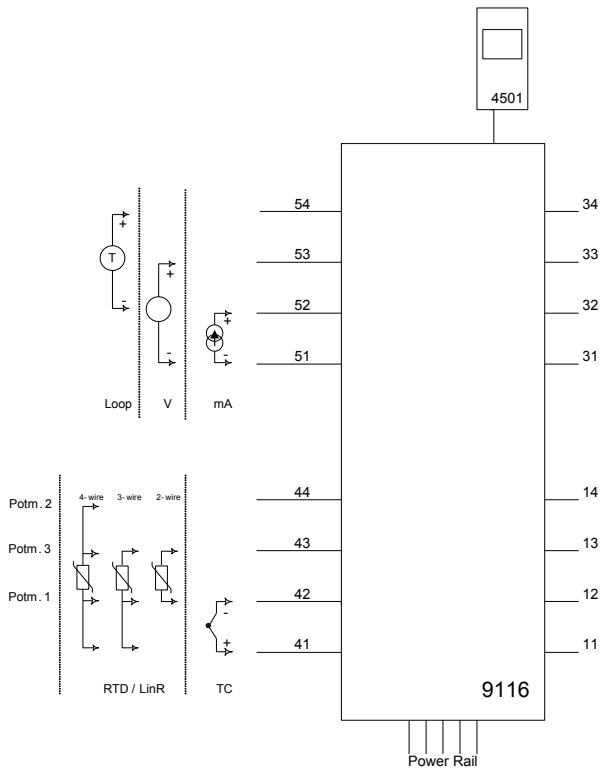

Supply terminal (31,32)
Voltage: 19.2 – 31.2 VDC

Status relay, terminal (33,34)
Zone 2 installation:
Voltage max: 32 VAC / 32 VDC
Power max: 16 VA / 32 W
Current max: 0.5 A AC / 1 A DC

Relay output, terminal (13,14)
Zone 2 installation
Voltage max: 32 V AC / 30 VDC
Power max: 64 VA / 60 W
Current max: 2 A AC / 2 ADC

For installation in Zone 2, the module shall be installed in an enclosure in type of protection Ex n or Ex e, providing a degree of protection of at least IP54. Cable entry devices and blanking elements shall fulfill the same requirements.

For installation on Power Rail in Zone 2, only Power Rail type 9400 supplied by Power Control Unit type 9410 (Type Examination Certificate IECEx KEM 08.0025X) is allowed.

The 4501 programming module is to be used solely with PR electronics' modules. It is important that the module is undamaged and has not been altered or modified in any way. Only 4501 modules free of dust and moisture shall be installed.

LERBAKKEN 10, 8410 RØNDE DENMARK

ATEX / UKEX Installation drawing



For safe installation of 9116 the following must be observed. The module shall only be installed by qualified personnel who are familiar with the national and international laws, directives and standards that apply to this area.
Year of manufacture can be taken from the first two digits in the serial number.



For installation in Zone 2 the following must be observed.
The 4501 programming module is to be used solely with PR electronics' modules. It is important that the module is undamaged and has not been altered or modified in any way.
Only 4501 modules free of dust and moisture shall be installed.

| | |
|---|---------------------|
| ATEX Certificate: | KEMA 10 ATEX 0053 X |
| UKEX Certificate 9116Bxx: | DEKRA 23UKEX0104 X |
| UKEX Certificate 9116Axx, 9116Bxx: | DEKRA 21UKEX0177 X |

Marking 9116Bxx:



II (1) G [Ex ia Ga] IIC/IIB/IIA
II (1) D [Ex ia Da] IIIC
I (M1) [Ex ia Ma] I

Marking 9116Bxx, 9116Axx

II 3G Ex ec nC IIC T4 Gc

Standards

EN 60079-0:2018, EN 60079-11:2012,
EN 60079-15:2019, EN60079-7:2015+A1:2018

Specific Conditions of Use

For group I (mines), the parameters for group IIA apply.

Install in pollution degree 2, overvoltage category II as defined in EN60664-1

Do not separate connectors when energized and an explosive gas mixture is present.
Do not mount or remove modules from the Power Rail when an explosive gas mixture is present.
Disconnect power before servicing.
The wiring of unused terminals is not allowed.

In type of protection [Ex ia Da] the parameters for intrinsic safety for gas group IIB are applicable.

For installation in Zone 2, the module shall be installed in an enclosure in type of protection Ex e, providing a degree of protection of at least IP54. Cable entry devices and blanking elements shall fulfill the same requirements.

For installation on Power Rail in Zone 2, only Power Rail type 9400 supplied by Power Control Unit type 9410 (Type Examination Certificate KEMA 07ATEX0152 X, DEKRA 21UKEX0169 X) is allowed.

Max. screw terminal torque 0.5 Nm.

Stranded wire should be installed with an insulation stripping length of 5 mm or via a suitable insulated terminal such as a bootlace ferrule.

Revision date:
2023-07-11

Version Revision
V10R1

Prepared by:
MMA

Page:
1/5


LERBAKKEN 10, 8410 RØNDE DENMARK

9116Bxx Installation:

Hazardous area
Zone 0,1,2, 20, 21, 22

Non Hazardous area
or Zone 2

$-20 \leq T_a \leq +60^\circ\text{C}$

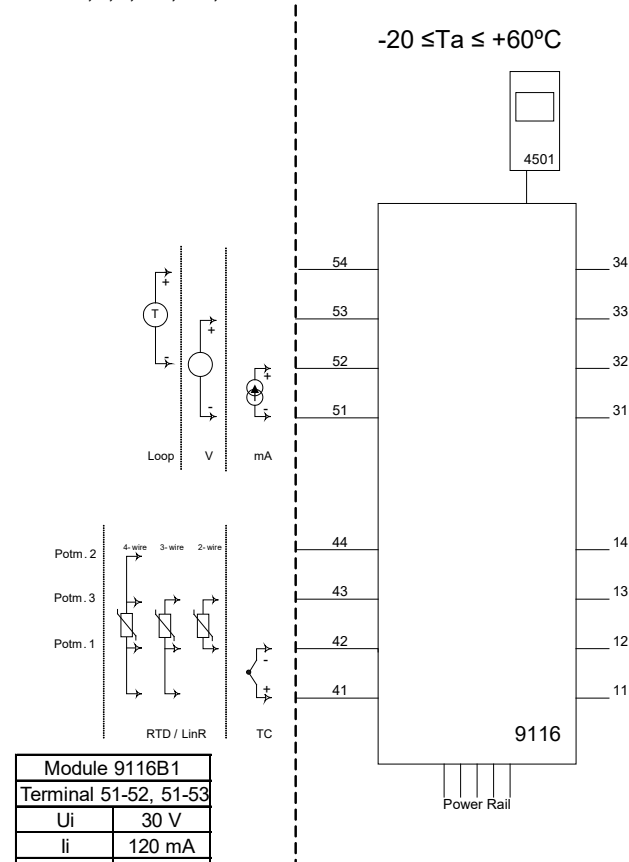

Supply terminal (31,32)
Voltage: 19.2 – 31.2 VDC

Status relay, terminal (33,34)
Zone 2 installation:
Voltage max: 32 VAC/ 32 VDC
Power max: 16 VA / 32 W
Current max: 0.5 A AC / 1 A DC

Relay output, terminal (13,14)
Zone 2 installation
Voltage max: 32 V AC / 30 VDC
Power max: 64 VA / 60 W
Current max: 2 A AC / 2 ADC

(terminal 11,12,13,14)
(terminal 31,32,33,34)
(terminal 91,92,93,94,95)
U_m: 253 V max. 400 Hz

| Module 9116B1 | |
|-----------------------|--------|
| Terminal 51-52, 51-53 | |
| U _i | 30 V |
| I _i | 120 mA |
| P _i | 900 mW |
| C _i | 3 nF |
| L _i | 1 μH |

| Module 9116B2 | |
|-----------------------|--------|
| Terminal 51-52, 51-53 | |
| U _i | 30 V |
| I _i | 120 mA |
| P _i | 900 mW |
| C _i | 3 nF |
| L _i | 1 μH |

| Module 9116B1 | | Group | Co | Lo | Lo/Ro |
|-----------------------|--------|-------|--------|-------|----------|
| Terminal 51-54, 52-54 | | | | | |
| U _o | 28 V | IIC | 80 nF | 4 mH | 54 μH/Ω |
| I _o | 93 mA | IIB | 640 nF | 16 mH | 218 μH/Ω |
| P _o | 650 mW | IIA | 2.1 μF | 32 mH | 436 μH/Ω |

| Module 9116B2 | | Group | Co | Lo | Lo/Ro |
|-----------------------|--------|-------|---------|-------|----------|
| Terminal 51-54, 52-54 | | | | | |
| U _o | 21.4 V | IIC | 0.16 μF | 4 mH | 54 μH/Ω |
| I _o | 93 mA | IIB | 1.13 μF | 16 mH | 218 μH/Ω |
| P _o | 650 mW | IIA | 4.15 μF | 32 mH | 436 μH/Ω |

| Module 9116B1 | | Group | Co | Lo | Lo/Ro |
|----------------|--------|-------|--------|---------|---------|
| Terminal 51-53 | | | | | |
| U _o | 28 V | IIC | 80 nF | 1000 mH | 4 mH/Ω |
| I _o | 1.1 mA | IIB | 640 nF | 1000 mH | 17 mH/Ω |
| P _o | 8 mW | IIA | 2.1 μF | 1000 mH | 35 mH/Ω |

| Module 9116B2 | | Group | Co | Lo | Lo/Ro |
|----------------|--------|-------|---------|---------|---------|
| Terminal 51-53 | | | | | |
| U _o | 21.4 V | IIC | 0.16 μF | 1000 mH | 4 mH/Ω |
| I _o | 1.1 mA | IIB | 1.13 μF | 1000 mH | 17 mH/Ω |
| P _o | 8 mW | IIA | 4.15 μF | 1000 mH | 35 mH/Ω |

| Module 9116B1 | | Group | Co | Lo | Lo/Ro |
|----------------|--------|-------|---------|---------|----------|
| Terminal 51-52 | | | | | |
| U _o | 8.3 V | IIC | 7 μF | 1000 mH | 100 mH/Ω |
| I _o | 0.2 mA | IIB | 73 μF | 1000 mH | 400 mH/Ω |
| P _o | 0.4 mW | IIA | 1000 μF | 1000 mH | 800 mH/Ω |

| Module 9116B2 | | Group | Co | Lo | Lo/Ro |
|----------------|--------|-------|---------|---------|----------|
| Terminal 51-52 | | | | | |
| U _o | 8.3 V | IIC | 7 μF | 1000 mH | 100 mH/Ω |
| I _o | 0.2 mA | IIB | 73 μF | 1000 mH | 400 mH/Ω |
| P _o | 0.4 mW | IIA | 1000 μF | 1000 mH | 800 mH/Ω |

| Module 9116B1 | | Group | Co | Lo | Lo/Ro |
|----------------------|---------|-------|---------|---------|---------|
| Terminal 41,42,43,44 | | | | | |
| U _o | 8.3 V | IIC | 7 μF | 207 mH | 1 mH/Ω |
| I _o | 13.1 mA | IIB | 73 μF | 828 mH | 5 mH/Ω |
| P _o | 27.3 mW | IIA | 1000 μF | 1000 mH | 10 mH/Ω |

| Module 9116B2 | | Group | Co | Lo | Lo/Ro |
|----------------------|---------|-------|---------|---------|---------|
| Terminal 41,42,43,44 | | | | | |
| U _o | 8.3 V | IIC | 7 μF | 207 mH | 1 mH/Ω |
| I _o | 13.1 mA | IIB | 73 μF | 828 mH | 5 mH/Ω |
| P _o | 27.3 mW | IIA | 1000 μF | 1000 mH | 10 mH/Ω |

Revision date:
2023-07-11

Version Revision
V10R1

Prepared by:
MMA

Page:
2/5


LERBAKKEN 10, 8410 RØNDE DENMARK

9116Bxx Installation:

Hazardous area
Zone 0,1,2, 20, 21, 22

Non Hazardous area
or Zone 2

-20 °C ≤ Ta ≤ +60°C

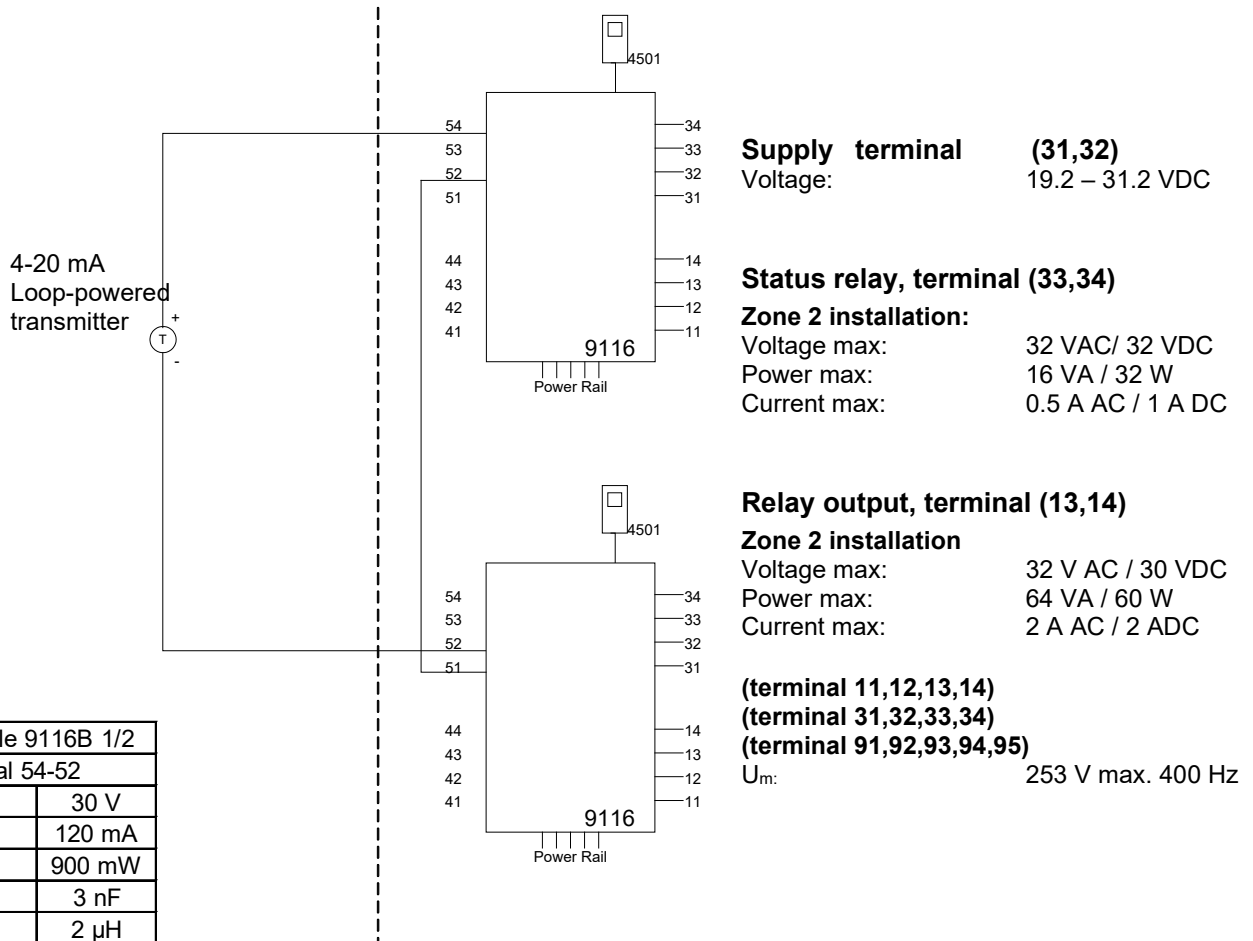

| Module 9116B1 | | Group | Co | Lo | Lo/Ro |
|--------------------|--------|-------|--------|-------|----------|
| Term. 54-52; 51-52 | | | | | |
| U _o | 28 V | IIC | 80 nF | 4 mH | 54 μH/Ω |
| I _o | 93 mA | IIB | 640 nF | 16 mH | 218 μH/Ω |
| P _o | 650 mW | IIA | 2.1 μF | 32 mH | 436 μH/Ω |

| Module 9116B2 | | Group | Co | Lo | Lo/Ro |
|--------------------|--------|-------|---------|-------|----------|
| Term. 54-52; 51-52 | | | | | |
| U _o | 21.4 V | IIC | 0.16 μF | 4 mH | 54 μH/Ω |
| I _o | 93 mA | IIB | 1.13 μF | 16 mH | 218 μH/Ω |
| P _o | 650 mW | IIA | 4.15 μF | 32 mH | 436 μH/Ω |


LERBAKKEN 10, 8410 RØNDE DENMARK

9116Bxx Installation:

Hazardous area
Zone 0,1,2, 20, 21, 22

Non Hazardous area
or Zone 2

-20 °C ≤ Ta ≤ +60°C

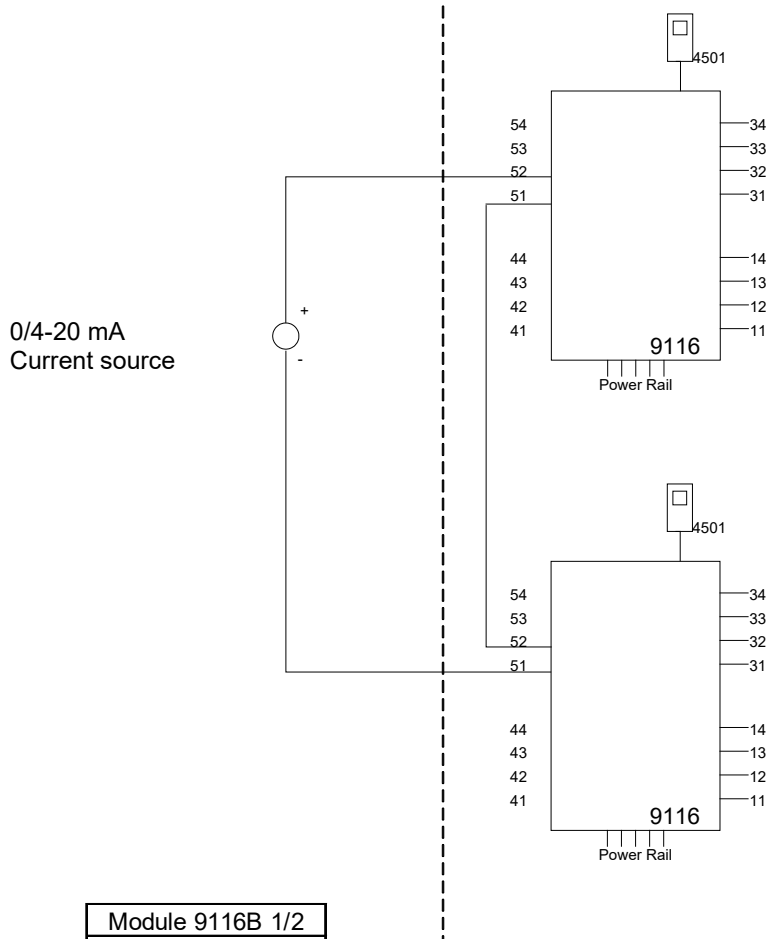

Supply terminal (31,32)
Voltage: 19.2 – 31.2 VDC

Status relay, terminal (33,34)
Zone 2 installation:
Voltage max: 32 VAC / 32 VDC
Power max: 16 VA / 32 W
Current max: 0.5 A AC / 1 A DC

Relay output, terminal (13,14)
Zone 2 installation
Voltage max: 32 V AC / 30 VDC
Power max: 64 VA / 60 W
Current max: 2 A AC / 2 ADC

(terminal 11,12,13,14)
(terminal 31,32,33,34)
(terminal 91,92,93,94,95)
U_m: 253 V max. 400 Hz


| | |
|------------------|--------|
| Module 9116B 1/2 | |
| Terminal 51-52 | |
| U _i | 30 V |
| I _i | 120 mA |
| P _i | 900 mW |
| C _i | 3 nF |
| L _i | 2 μH |

| | | | | |
|--------------------|-------|--------|--------|---------|
| Module 9116B 1/2 | Group | Co | Lo | Lo/Ro |
| Term. 52-51, 51-52 | | | | |
| U _o | IIC | 0.4 μF | 100 mH | 25mH/Ω |
| I _o | IIB | 2.3 μF | 100 mH | 100mH/Ω |
| P _o | IIA | 9.5 μF | 100 mH | 200mH/Ω |

LERBAKKEN 10, 8410 RØNDE DENMARK

9116Axx Installation:

Non Hazardous area or Zone 2

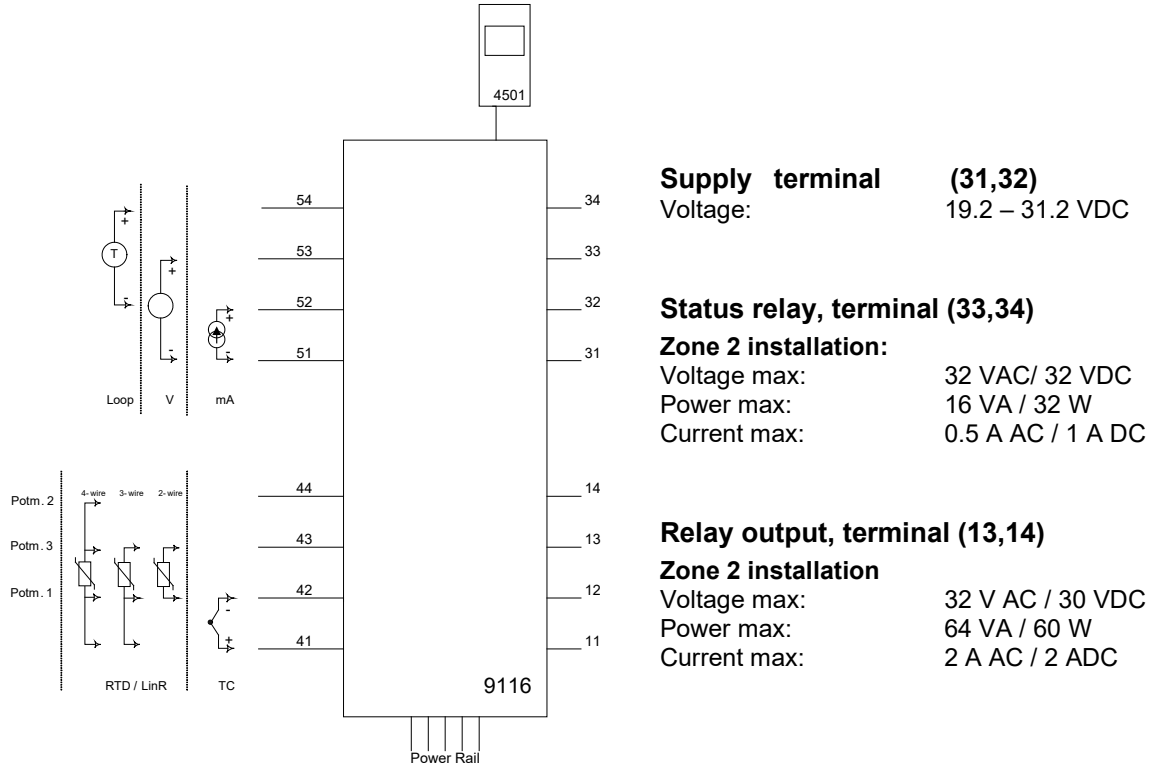

For installation in Zone 2, the module shall be installed in an enclosure in type of protection Ex e, providing a degree of protection of at least IP54. Cable entry devices and blanking elements shall fulfill the same requirements.

For installation on Power Rail in Zone 2, only Power Rail type 9400 supplied by Power Control Unit type 9410 (Type Examination Certificate KEMA 07ATEX0152 X, DEKRA 21UKEX0169 X) is allowed.

The 4501 programming module is to be used solely with PR electronics' modules. It is important that the module is undamaged and has not been altered or modified in any way. Only 4501 modules free of dust and moisture shall be installed.

Max. screw terminal torque 0.5 Nm.
Stranded wire should be installed with an insulation stripping length of 5 mm or via a suitable insulated terminal such as a bootlace ferrule.

LERBAKKEN 10, 8410 ROENDE DENMARK

FM Installation drawing

9116



For safe installation of 9116B the following must be observed. The module shall only be installed by qualified personnel who are familiar with the national and international laws, directives and standards that apply to this area.

Year of manufacture can be taken from the first two digits in the serial number.

4501



For Installation in Zone 2 / Division 2 the following must be observed.

The 4501 programming module is to be used solely with PR electronics modules. It is important that the module is undamaged and has not been altered or modified in any way. Only 4501 modules free of dust and moisture shall be installed.

Hazardous Classified Location

Class I/II/III, Division 1, Group A,B,C,D,E,F,G or Class I, Zone 0/1 Group IIC, [AEx ia] IIC or Group IIC, [Ex ia Ga] IIC Gc


Unclassified Location or Hazardous Classified Location

Class I, Division 2, Group A,B,C,D T4 or Class I Zone 2 Group IIC T4 Gc

Simple Apparatus or Intrinsic safe apparatus with entity parameters:

- $V_{max} (U_i) \geq V_t (U_o)$
- $I_{max} (I_i) \geq I_t (I_o)$
- $P_i \geq P_t (P_o)$
- $C_a \geq C_{cable} + C_i$
- $L_a \geq L_{cable} + L_i$

$-20 \leq T_a \leq +60^\circ C$

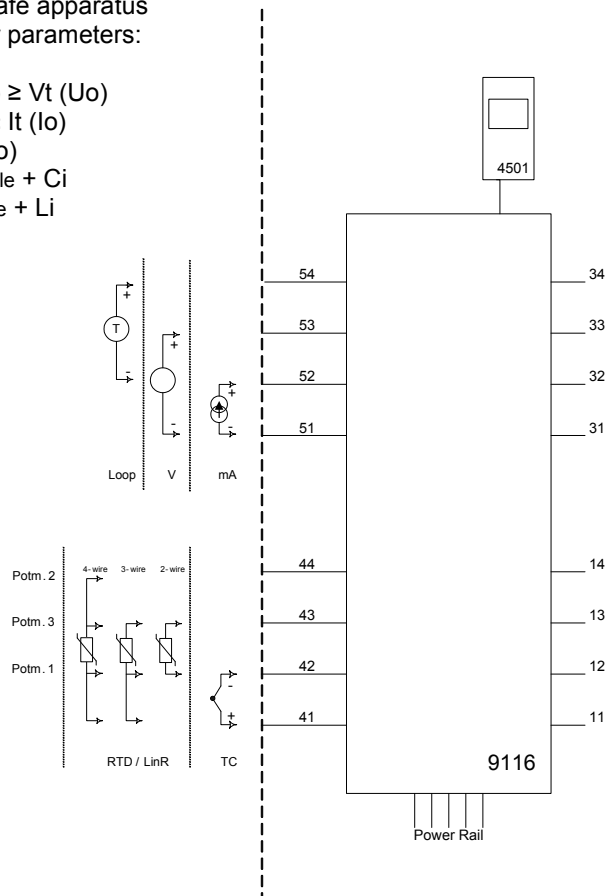

Status relay, terminal (33,34)

Non hazardous area installation
 Voltage max: 125 VAC / 110 VDC
 Power max: 62.5 VA / 32 W
 Current max: 0.5 A AC / 0.3 ADC

Zone 2 installation:

Voltage max: 32 VAC/ 32 VDC
 Power max: 16 VA / 32 W
 Current max: 0.5 A AC / 1 A DC

Relay output, terminal (13,14)

Non hazardous area installation
 Voltage max: 250 VAC / 30 VDC
 Power max: 500 VA / 60 W
 Current max: 2 A AC / 2 ADC

Zone 2 installation

Voltage max: 32 V AC / 30 VDC
 Power max: 64 VA / 60 W
 Current max: 2 A AC / 2 ADC

(terminal 11,12,13,14)
(terminal 31,32,33,34)
(terminal 91,92,93,94,95)
 U_m: 253 V max. 400 Hz

LERBAKKEN 10, 8410 ROENDE DENMARK

| | |
|-----------------------|--------|
| Module 9116B1 | |
| Terminal 51-52, 51-53 | |
| Ui, Vmax | 30 V |
| li, lmax | 120 mA |
| Pi | 900 mW |
| Ci | 3 nF |
| Li | 1 µH |

| | |
|-----------------------|--------|
| Module 9116B2 | |
| Terminal 51-52, 51-53 | |
| Ui, Vmax | 30 V |
| li, lmax | 120 mA |
| Pi | 900 mW |
| Ci | 3 nF |
| Li | 1 µH |

| | | | | |
|--|--------------|--------|-------|----------|
| Module 9116B1 Terminal 51-54, 52-54 | Group | Co | Lo | Lo/Ro |
| Uo, Voc | IIC or A,B | 80 nF | 4 mH | 54 µH/Ω |
| Io, Isc | IIB or C,E,F | 640 nF | 16 mH | 218 µH/Ω |
| Po | IIA or D,G | 2.1 µF | 32 mH | 436 µH/Ω |

| | | | | |
|--|--------------|---------|-------|----------|
| Module 9116B2 Terminal 51-54, 52-54 | Group | Co | Lo | Lo/Ro |
| Uo, Voc | IIC or A,B | 0.16 µF | 4 mH | 54 µH/Ω |
| Io, Isc | IIB or C,E,F | 1.13 µF | 16 mH | 218 µH/Ω |
| Po | IIA or D,G | 4.15 µF | 32 mH | 436 µH/Ω |

| | | | | |
|---------------------------------|--------------|--------|---------|---------|
| Module 9116B1 Terminal 51-53 | Group | Co | Lo | Lo/Ro |
| Uo, Voc | IIC or A,B | 80 nF | 1000 mH | 4 mH/Ω |
| Io, Isc | IIB or C,E,F | 640 nF | 1000 mH | 17 mH/Ω |
| Po | IIA or D,G | 2.1 µF | 1000 mH | 35 mH/Ω |

| | | | | |
|---------------------------------|--------------|---------|---------|---------|
| Module 9116B2 Terminal 51-53 | Group | Co | Lo | Lo/Ro |
| Uo, Voc | IIC or A,B | 0.16 µF | 1000 mH | 4 mH/Ω |
| Io, Isc | IIB or C,E,F | 1.13 µF | 1000 mH | 17 mH/Ω |
| Po | IIA or D,G | 4.15 µF | 1000 mH | 35 mH/Ω |

| | | | | |
|---------------------------------|--------------|---------|---------|----------|
| Module 9116B1 Terminal 51-52 | Group | Co | Lo | Lo/Ro |
| Uo, Voc | IIC or A,B | 7 µF | 1000 mH | 100 mH/Ω |
| Io, Isc | IIB or C,E,F | 73 µF | 1000 mH | 400 mH/Ω |
| Po | IIA or D,G | 1000 µF | 1000 mH | 800 mH/Ω |

| | | | | |
|---------------------------------|--------------|---------|---------|----------|
| Module 9116B2 Terminal 51-52 | Group | Co | Lo | Lo/Ro |
| Uo, Voc | IIC or A,B | 7 µF | 1000 mH | 100 mH/Ω |
| Io, Isc | IIB or C,E,F | 73 µF | 1000 mH | 400 mH/Ω |
| Po | IIA or D,G | 1000 µF | 1000 mH | 800 mH/Ω |

| | | | | |
|---------------------------------------|--------------|---------|---------|---------|
| Module 9116B1 Terminal 41,42,43,44 | Group | Co | Lo | Lo/Ro |
| Uo, Voc | IIC or A,B | 7 µF | 207 mH | 1 mH/Ω |
| Io, Isc | IIB or C,E,F | 73 µF | 828 mH | 5 mH/Ω |
| Po | IIA or D,G | 1000 µF | 1000 mH | 10 mH/Ω |

| | | | | |
|---------------------------------------|--------------|---------|---------|---------|
| Module 9116B2 Terminal 41,42,43,44 | Group | Co | Lo | Lo/Ro |
| Uo, Voc | IIC or A,B | 7 µF | 207 mH | 1 mH/Ω |
| Io, Isc | IIB or C,E,F | 73 µF | 828 mH | 5 mH/Ω |
| Po | IIA or D,G | 1000 µF | 1000 mH | 10 mH/Ω |

Installation notes:

In Class I, Division 2 installations, the subject equipment shall be mounted within a too-secured enclosure which is capable of accepting one or more of the Class I, Division 2 wiring methods specified in the the National Electrical Code (ANSI/NFPA 70) or Canadian Electrical Code (C22.1).

In Zone 2 installations, the subject equipment shall be mounted within a tool secured enclosure which is capable of accepting one or more of the Zone 2 wiring methods specified in the National Electrical Code (ANSI/NFPA 70) or the Canadian Electrical Code (C22.1). Where installed in outdoor or potentially wet locations, the enclosure shall, at a minimum, meet the requirements of IP54.

In Zone 2 installations, the installer shall ensure protection of supply terminals against transient voltages exceeding 140% of the rated supply voltage.

Install in environments rated Pollution Degree 2 or better; overvoltage category I or II.

The module must be supplied from a Power Supply having double or reinforced insulation.

The use of stranded wires is not permitted for mains wiring except when wires are fitted with cable ends.

For installation on the 9400 Power Rail the power must be supplied from Power Control Module Unit 9410.

The module is galvanic isolated and does not require grounding.

Use 60 / 75 °C Copper Conductors with wire Size AWG: (26-14).

Warning: Substitution of components may impair intrinsic safety.

Warning: To prevent ignition of the explosive atmospheres, disconnect power before servicing and do not separate connectors when energized and an explosive gas mixture is present.

Warning: Do not mount or remove modules from the Power Rail when an explosive gas mixture is present.


LERBAKKEN 10, 8410 ROENDE DENMARK

Hazardous Classified Location

 Class I/II/III, Division 1, Group A,B,C,D,E,F,G
 or Class I, Zone 0/1 Group IIC, [AEx ia] IIC
 or Group IIC, [Ex ia Ga] IIC Gc

Unclassified Location or
Hazardous Classified Location

 Class I, Division 2, Group A,B,C,D T4
 or Class I Zone 2 Group IIC T4 Gc

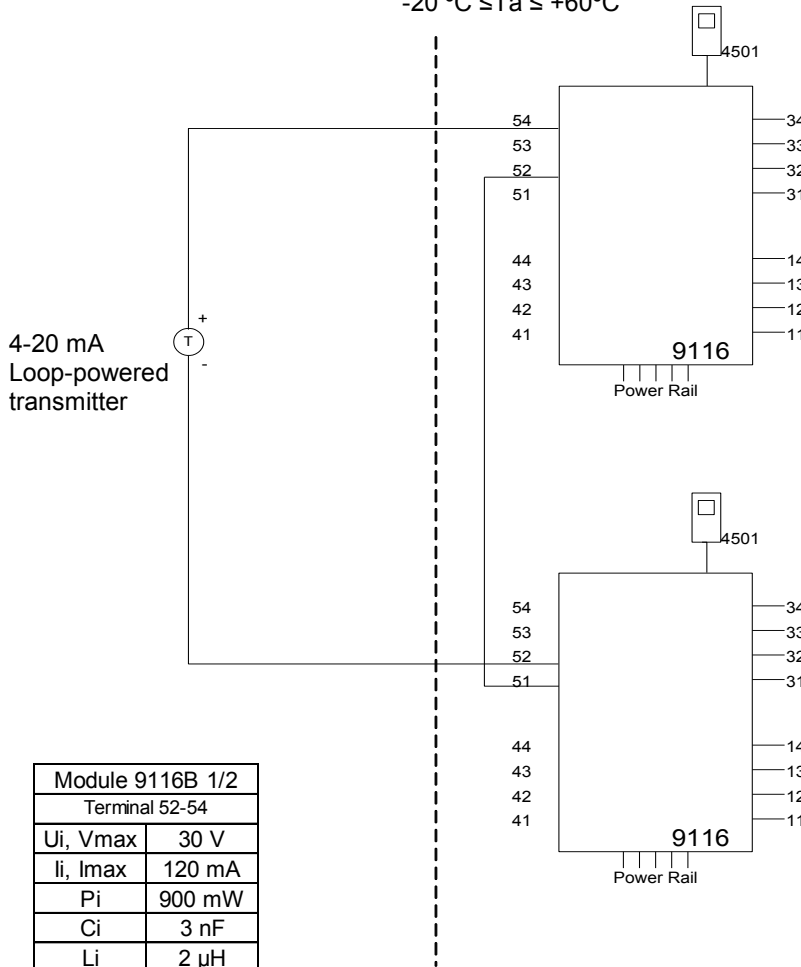 $-20\text{ }^{\circ}\text{C} \leq T_a \leq +60\text{ }^{\circ}\text{C}$


| Module 9116B 1/2 | |
|-----------------------------------|--------|
| Terminal 52-54 | |
| U _i , V _{max} | 30 V |
| I _i , I _{max} | 120 mA |
| P _i | 900 mW |
| C _i | 3 nF |
| L _i | 2 μH |

| Module 9116B1 | | Group | C _o | L _o | L _o /R _o |
|----------------------------------|--------|---------------|----------------|----------------|--------------------------------|
| Terminals 52-54 | | | | | |
| U _o , V _{oc} | 28 V | IIC or A,B | 80 nF | 4 mH | 54 μH/Ω |
| I _o , I _{sc} | 93 mA | II B or C,E,F | 640 nF | 16 mH | 218 μH/Ω |
| P _o | 650 mW | II A or D,G | 2.1 μF | 32 mH | 436 μH/Ω |

| Module 9116B2 | | Group | C _o | L _o | L _o /R _o |
|----------------------------------|--------|---------------|----------------|----------------|--------------------------------|
| Terminal 52-54 | | | | | |
| U _o , V _{oc} | 21.4 V | IIC or A,B | 0.16 μF | 4 mH | 54 μH/Ω |
| I _o , I _{sc} | 93 mA | II B or C,E,F | 1.13 μF | 16 mH | 218 μH/Ω |
| P _o | 650 mW | II A or D,G | 4.15 μF | 32 mH | 436 μH/Ω |

Status relay, terminal (33,34)
Non hazardous area installation

 Voltage max: 125 VAC / 110 VDC
 Power max: 62.5 VA / 32 W
 Current max: 0.5 A AC / 0.3 ADC

Zone 2 installation:

 Voltage max: 32 VAC / 32 VDC
 Power max: 16 VA / 32 W
 Current max: 0.5 A AC / 1 A DC

Relay output, terminal (13,14)
Non hazardous area installation

 Voltage max: 250 VAC / 30 VDC
 Power max: 500 VA / 60 W
 Current max: 2 A AC / 2 ADC

Zone 2 installation

 Voltage max: 32 VAC / 30 VDC
 Power max: 64 VA / 60 W
 Current max: 2 A AC / 2 ADC

(terminal 11,12,13,14)
(terminal 31,32,33,34)
(terminal 91,92,93,94,95)
 U_m: 253 V max. 400 Hz

LERBAKKEN 10, 8410 ROENDE DENMARK


Hazardous Classified Location

 Class I/II/III, Division 1, Group A,B,C,D,E,F,G
 or Class I, Zone 0/1 Group IIC, [AEx ia] IIC
 or Group IIC, [Ex ia Ga] IIC Gc

**Unclassified Location or
Hazardous Classified Location**

 Class I, Division 2, Group A,B,C,D T4
 or Class I Zone 2 Group IIC T4 Gc

 $-20\text{ }^{\circ}\text{C} \leq T_a \leq +60\text{ }^{\circ}\text{C}$

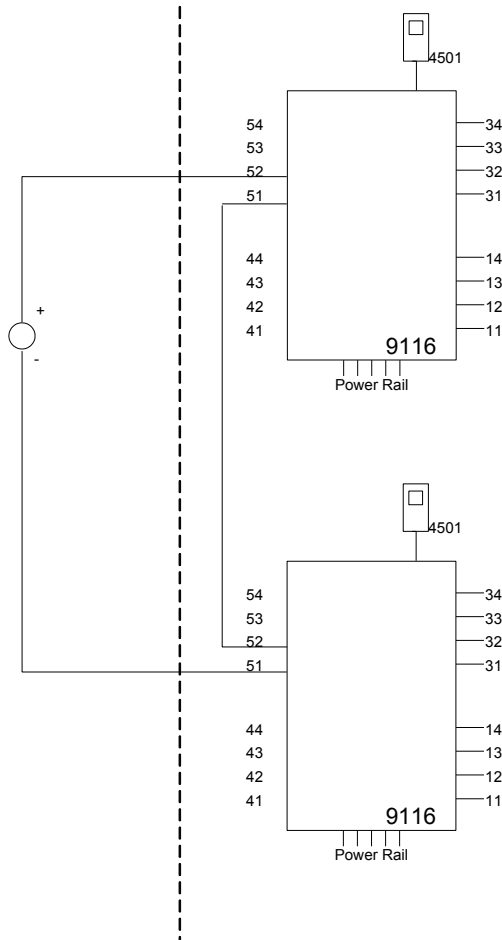 0/4-20 mA
 Current Source

Status relay, terminal (33,34)
Unclassified location installation:

Voltage max: 125 VAC / 110 VDC

Power max: 62.5 VA / 32 W

Current max: 0.5 A AC / 0.3 ADC

Zone 2 installation:

Voltage max: 32 VAC / 32 VDC

Power max: 16 VA / 32 W

Current max: 0.5 A AC / 1 A DC

Relay output, terminal (13,14)
Unclassified location installation:

Voltage max: 250 VAC / 30 VDC

Power max: 500 VA / 60 W

Current max: 2 A AC / 2 ADC

Zone 2 installation

Voltage max: 32 VAC / 30 VDC

Power max: 64 VA / 60 W

Current max: 2 A AC / 2 ADC

(terminal 11,12,13,14)
(terminal 31,32,33,34)
(terminal 91,92,93,94,95)
 $U_m: 253\text{ V max. } 400\text{ Hz}$

| Module 9116B 1/2 | |
|------------------|-----------|
| Terminal 51-52 | |
| U_i, V_{max} | 30 V |
| I_i, I_{max} | 120 mA |
| P_i | 900 mW |
| C_i | 3 nF |
| L_i | 2 μ H |

| Module 9116B 1/2 | | Group | C_o | L_o | L_o/R_o |
|------------------|--------|---------------|-------------|--------|-----------------|
| Terminals 51-52 | | | | | |
| U_o, V_{oc} | 16.6 V | IIC or A,B | 0.4 μ F | 100 mH | 25mH/ Ω |
| I_o, I_{sc} | 0.2 mA | II B or C,E,F | 2.3 μ F | 100 mH | 100mH/ Ω |
| P_o | 0.8 mW | II A or D,G | 9.5 μ F | 100 mH | 200mH/ Ω |

LERBAKKEN 10, 8410 ROENDE DENMARK

UL Installation drawing



For safe installation of associated apparatus 9116Bx the following must be observed. The module shall only be installed by qualified personnel who are familiar with the national and international laws, directives and standards that apply to this area



For Installation in DIV2/Zone 2 the following must be observed.

The 4501 programming module is to be used solely with PR electronics modules. It is important that the module is undamaged and has not been altered or modified in any way. Only 4501 modules free of dust and moisture shall be installed.

9116A1-U9, 9116B1-U9: Universal Converter Voc or Uo: 28V

9116A2-U9, 9116B2-U9: Universal Converter Voc or Uo: 21.4V

Marking:



Proc. Cont. Eq. for Use in Haz. Loc.
Install in CL I DIV2 GP A-D T4 provide IS circuits to CL I-III DIV 1 GP A-G or CL I Zn2 Gp IIC T4 provides IS circuits for CL I Zn0 Gp IIC/Zn20 Gp IIIC [Exia] Installation Drawing: 9116QU01

The 9116Bx is galvanically isolating associated apparatus for installation in non-hazardous locations or Class I, Division 2, Groups A – D hazardous locations with intrinsically safe connections to Class I, II and III hazardous locations.



E233311

Proc. Cont. Eq. for Use in Haz. Loc.
Install in CL I DIV2 GP A-D T4 or CL I Zn2 Gp IIC T4
Installation Drawing: 9116QU01

The 9116Ax is intended for installation in non-hazardous locations or Class I, Division 2, Groups A – D or Zone 2 Group IIC hazardous locations.

Standards:

- UL 121201 NONINCENDIVE ELECTRICAL EQUIPMENT FOR USE IN CLASS I AND II, DIVISION 2 AND CLASS III, DIVISIONS 1 AND 2 HAZARDOUS (CLASSIFIED) LOCATIONS Edition 9 - Revision Date 2018/08/31
- CSA C22.2 NO. 213 NONINCENDIVE ELECTRICAL EQUIPMENT FOR USE IN CLASS I AND II, DIVISION 2 AND CLASS III, DIVISIONS 1 AND 2 HAZARDOUS (CLASSIFIED) LOCATIONS- Edition 3 - Issue Date 2017/09/01
- UL 913 STANDARD FOR INTRINSICALLY SAFE APPARATUS AND ASSOCIATED APPARATUS FOR USE IN CLASS I, II, III, DIVISION 1, HAZARDOUS (CLASSIFIED) LOCATIONS- Edition 8 - Revision Date 2015/10/16
- CSA C22.2 NO. 60079-0 EXPLOSIVE ATMOSPHERES — PART 0: EQUIPMENT — GENERAL REQUIREMENTS- Edition 3 - Issue Date 2015/10/01
- CSA C22.2 NO. 60079-11:14 EXPLOSIVE ATMOSPHERES — PART 11: EQUIPMENT PROTECTION BY INTRINSIC SAFETY "I"- Edition 2 - Issue Date 2014/02/01

Revision date:
2019-11-26

Version Revision
V1 R0

Prepared by:
PB

Page:
1/7

LERBAKKEN 10, 8410 ROENDE DENMARK


9116Bx-U9 Installation:

Hazardous Classified Location

Class I/II/III, Division 1, Group A,B,C,D,E,F,G
Zone 0,1, 2 Group IIC, IIB, IIA or
Zone 20, 21

**Unclassified Location or
Hazardous Classified Location**

Class I, Division 2, Group ABCD T4
Class I Zone 2 Group IIC T4

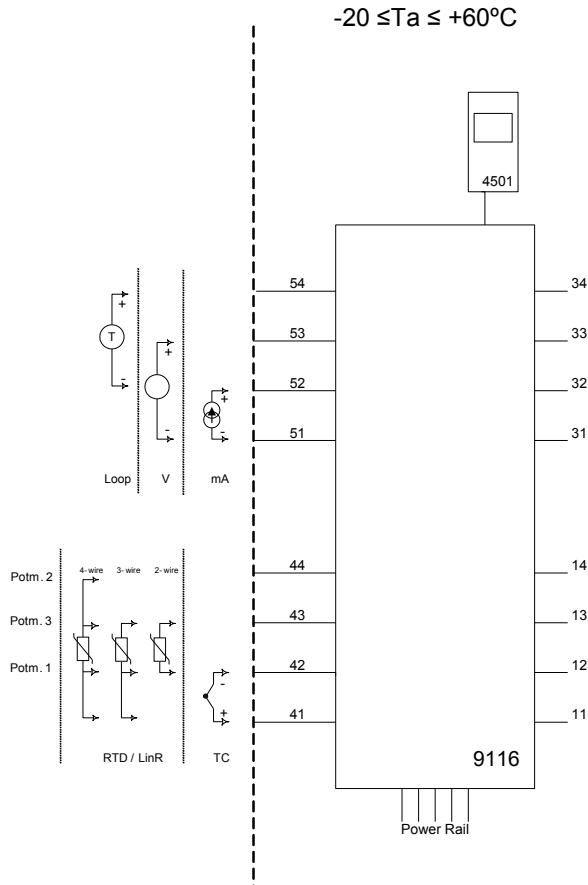

Supply terminal (31,32)
Voltage: 19.2 – 31.2 VDC

Status relay, terminal (33,34)
**Class I Division 2 or
Zone 2 installation:**
Voltage max: 32 Vac/ 32 Vdc
Current max: 0.5 Aac / 0.3Adc

Relay output, terminal (13,14)
**Class I Division 2 or
Zone 2 installation**
Voltage max: 32 V AC / 30 VDC
Power max: 64 VA / 60 W
Current max: 2 A AC / 2 ADC

(terminal 11,12,13,14)
(terminal 31,32,33,34)
(terminal 91,92,93,94,95)
U_m: 253 V max. 400 Hz

LERBAKKEN 10, 8410 ROENDE DENMARK

9116B1-U9 and 9116B2-U9 Terminal 51-52, 51-53
 Vmax or Ui: 30V; Imax or Ii:120mA; Pi:900mW; Ci:3nF; Li:1μH

| Module 9116B1-U9 Terminal 51-54,52-54 | | Group | Ca or Co | La or Lo | Lo/Ro | Module 9116B2-U9 Terminal 51-54,52-54 | | Group | Ca or Co | La or Lo | Lo/Ro |
|--|-------|--------------|----------|----------|---------|--|-------|--------------|----------|----------|---------|
| Voc, Uo | 28V | IIC or A,B | 80 nF | 4 mH | 54 μH/Ω | Voc, Uo | 21.4V | IIC or A,B | 0.16μF | 4 mH | 54 μH/Ω |
| Isc, Io | 93mA | IIB or C,E,F | 640nF | 16 mH | 218μH/Ω | Isc, Io | 93mA | IIB or C,E,F | 1.13μF | 16 mH | 218μH/Ω |
| Po | 650mW | IIA or D,G | 2,1μF | 32 mH | 436μH/Ω | Po | 650mW | IIA or D,G | 4.15μF | 32 mH | 436μH/Ω |

| Module 9116B1-U9 Terminal 51-53 | | Group | Ca or Co | La or Lo | Lo/Ro | Module 9116B2-U9 Terminal 51-53 | | Group | Ca or Co | La or Lo | Lo/Ro |
|------------------------------------|-------|--------------|----------|----------|--------|------------------------------------|-------|--------------|----------|----------|--------|
| Voc, Uo | 28V | IIC or A,B | 80 nF | 1000 mH | 4 mH/Ω | Voc, Uo | 21.4V | IIC or A,B | 0.16μF | 1000 mH | 4 mH/Ω |
| Isc, Io | 1.1mA | IIB or C,E,F | 640nF | 1000 mH | 17mH/Ω | Isc, Io | 1.1mA | IIB or C,E,F | 1.13μF | 1000 mH | 17mH/Ω |
| Po | 8mW | IIA or D,G | 2,1μF | 1000 mH | 35mH/Ω | Po | 8mW | IIA or D,G | 4.15μF | 1000 mH | 35mH/Ω |

| Module 9116B1-U9 Terminal 51-52 | | Group | Ca or Co | La or Lo | Lo/Ro | Module 9116B2-U9 Terminal 51-52 | | Group | Ca or Co | La or Lo | Lo/Ro |
|------------------------------------|-------|--------------|----------|----------|----------|------------------------------------|-------|--------------|----------|----------|----------|
| Voc, Uo | 8.3V | IIC or A,B | 7μF | 1000 mH | 100 mH/Ω | Voc, Uo | 8.3V | IIC or A,B | 7μF | 1000 mH | 100 mH/Ω |
| Isc, Io | 0.2mA | IIB or C,E,F | 73μF | 1000 mH | 400mH/Ω | Isc, Io | 0.2mA | IIB or C,E,F | 73μF | 1000 mH | 400mH/Ω |
| Po | 0.4mW | IIA or D,G | 1000μF | 1000 mH | 800mH/Ω | Po | 0.4mW | IIA or D,G | 1000μF | 1000 mH | 800mH/Ω |

| Module 9116B1-U9 Terminal 41,42,43,44 | | Group | Ca or Co | La or Lo | Lo/Ro | Module 9116B2-U9 Terminal 41,42,43,44 | | Group | Ca or Co | La or Lo | Lo/Ro |
|--|--------|--------------|----------|----------|--------|--|--------|--------------|----------|----------|--------|
| Voc, Uo | 8.3V | IIC or A,B | 7μF | 207 mH | 1 mH/Ω | Voc, Uo | 8.3V | IIC or A,B | 7μF | 207 mH | 1 mH/Ω |
| Isc, Io | 13.1mA | IIB or C,E,F | 73μF | 828 mH | 5 mH/Ω | Isc, Io | 13.1mA | IIB or C,E,F | 73μF | 828 mH | 5 mH/Ω |
| Po | 27.3mW | IIA or D,G | 1000μF | 1000 mH | 10mH/Ω | Po | 27.3mW | IIA or D,G | 1000μF | 1000 mH | 10mH/Ω |

Installation notes 9116Ax-U9 and 9116Bx-U9:

The module must be installed in a tool-secured enclosure suitable for the application in accordance with the National Electrical Code (ANSI/NFPA 70) for installation in the United States, the Canadian Electrical Code for installations in Canada, or other local codes, as applicable.

The module is galvanically isolated and does not require grounding.

Install in pollution degree 2, overvoltage category II, in accordance with IEC 60664-1.

Use minimum 75 °C copper conductors with wire size AWG: (26-14)

Warning: Substitution of components may impair intrinsic safety.

Avertissement: La substitution de composants peut compromettre la sécurité intrinsèque.

Warning: To prevent ignition of the explosive atmospheres, disconnect power before servicing and do not separate connectors, install or remove module from Power Rail when energized and an explosive gas mixture is present.

Avertissement : Pour éviter l'inflammation d'atmosphères explosibles, déconnectez l'alimentation avant les opérations d'entretien. Ne montez pas ou n'enlevez pas les connecteurs quand le module est sous tension et en présence d'un mélange de gaz. Ne montez pas ou n'enlevez pas les modules du rail d'alimentation en présence d'un mélange de gaz.

LERBAKKEN 10, 8410 ROENDE DENMARK

Installation notes 9116Bx-U9:

Associated Equipment /Appareillage Associé [Ex ia]

The Ex output current of this associated apparatus is limited by a resistor such that the output voltage-current plot is a straight line drawn between open-circuit voltage and short-circuit current. Selected intrinsically safe equipment must be third party listed as intrinsically safe for the application, and have intrinsically safe entity parameters conforming with Table 1 below.

TABLE 1:

| <u>I.S. Equipment</u> | | <u>Associated Apparatus</u> |
|-----------------------|---|-----------------------------|
| V max (or Ui) | ≥ | Voc or Vt (or Uo) |
| I max (or Ii) | ≥ | Isc or It (or Io) |
| P max, Pi | ≥ | Po |
| Ci + Ccable | ≤ | Ca (or Co) |
| Li + Lcable | ≤ | La (or Lo) |

The module may also be connected to a simple apparatus as defined in Article 504.2 and installed and temperature classified in accordance with Article 504.10(D) of the National Electrical Code (ANSI/NFPA 70), or other local codes, as applicable.

Capacitance and inductance of the field wiring from the intrinsically safe equipment to the associated apparatus shall be calculated and must be included in the system calculations as shown in Table 1. Cable capacitance, Ccable, plus intrinsically safe equipment capacitance, Ci must be less than the marked capacitance, Ca (or Co), shown on any associated apparatus used. The same applies for inductance (Lcable, Li and La or Lo, respectively). Where the cable capacitance and inductance per foot are not known, the following values shall be used: Ccable = 60 pF/ft., Lcable = 0.2 μH/ft.

Where multiple circuits extend from the same piece of associated apparatus, they must be installed in separate cables or in one cable having suitable insulation. Refer to Article 504.30(B) of the National Electrical Code (ANSI/NFPA 70) and Instrument Society of America Recommended Practice ISA RP12.06 for installing intrinsically safe equipment.

Intrinsically safe circuits must be wired and separated in accordance with Article 504.20 of the National Electrical Code (ANSI/NFPA 70) or other local codes, as applicable.

The module has not been evaluated for use in combination with another associated apparatus.

Terminals 41-44 are internally connected to terminals 51-54.


There are no serviceable parts in the equipment and no component substitution is permitted.

For installations in which both the Ci and Li of the intrinsically safe apparatus exceeds 1% of the Ca (or Co) and La (or Lo) parameters of the associated apparatus (excluding the cable), then 50% of Ca (or Co) and La (or Lo) parameters are applicable and shall not be exceeded. The reduced capacitance shall not be greater than 1 μF for Groups C and/or D, and 600 nF for Groups A and B. The values of Ca (or Co) and La (or Lo) determined by this method shall not be exceeded by the sum of all of Ci plus cable capacitances and the sum of all of the Li plus cable inductances in the circuit respectively.

LERBAKKEN 10, 8410 ROENDE DENMARK

9116Bx-U9 Splitter Installation:
Hazardous Classified Location

 Class I/II/III, Division 1, Group A,B,C,D,E,F,G
 Zone 0,1, 2 Group IIC, IIB, IIA or
 Zone 20, 21

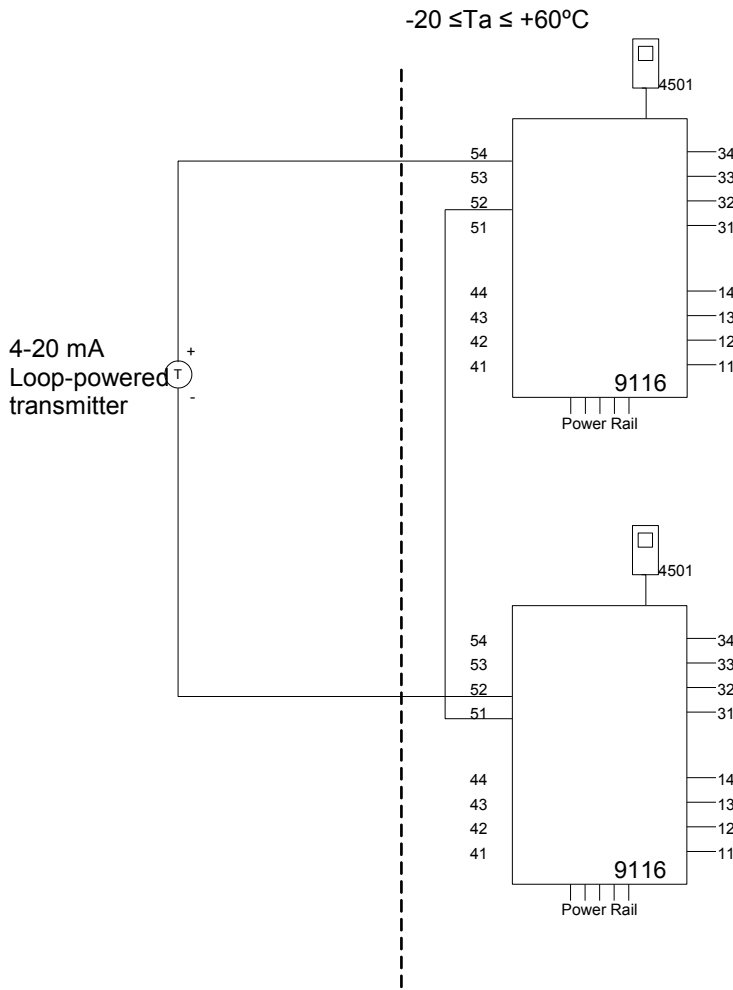Unclassified Location or
Hazardous Classified Location
 Class I, Division 2, Group ABCD T4
 Class I Zone 2 Group IIC T4


Supply terminal (31,32)
 Voltage: 19.2 – 31.2 VDC

Status relay, terminal (33,34)
Class I Division 2 or Zone 2 installation:
 Voltage max: 32 Vac/ 32 Vdc
 Current max: 0.5 Aac / 0.3 Adc

Relay output, terminal (13,14)
Class I Division 2 or Zone 2 installation
 Voltage max: 32 V AC / 30 VDC
 Power max: 64 VA / 60 W
 Current max: 2 A AC / 2 ADC

(terminal 11,12,13,14)
(terminal 31,32,33,34)
(terminal 91,92,93,94,95)
 U_m: 253 V max. 400 Hz

| Module 9116B1-U9 Terminal 51-54,52-54 | | Group | Ca or Co | La or Lo | Lo/Ro |
|--|-------|--------------|----------|----------|---------|
| Voc, Uo | 28V | IIC or A,B | 80 nF | 4 mH | 54 μH/Ω |
| Isc, Io | 93mA | IIB or C,E,F | 640nF | 16 mH | 218μH/Ω |
| Po | 650mW | IIA or D,G | 2,1μF | 32 mH | 436μH/Ω |

| Module 9116B2-U9 Terminal 51-54,52-54 | | Group | Ca or Co | La or Lo | Lo/Ro |
|--|-------|--------------|----------|----------|---------|
| Voc, Uo | 21.4V | IIC or A,B | 0.16μF | 4 mH | 54 μH/Ω |
| Isc, Io | 93mA | IIB or C,E,F | 1.13μF | 16 mH | 218μH/Ω |
| Po | 650mW | IIA or D,G | 4.15μF | 32 mH | 436μH/Ω |

 9116B1-U9 and 9116B2-U9
 Terminal 51-52, 54-52

 V_{max} or U_i: 30V;
 I_{max} or I_i: 120mA;
 P_i: 900mW;
 C_i: 3nF;
 L_i: 2μH

LERBAKKEN 10, 8410 ROENDE DENMARK

9116Bx-U9 Installation:

Hazardous Classified Location

Class I/II/III, Division 1, Group A,B,C,D,E,F,G
Zone 0,1, 2 Group IIC, IIB, IIA or
Zone 20, 21

Unclassified Location or

Hazardous Classified Location
Class I, Division 2, Group ABCD T4
Class I Zone 2 Group IIC T4



Supply terminal (31,32)
Voltage: 19.2 – 31.2 VDC

Status relay, terminal (33,34)

**Class I Division 2 or
Zone 2 installation:**
Voltage max: 32 Vac/ 32 Vdc
Current max: 0.5 Aac / 0.3Adc

Relay output, terminal (13,14)

**Class I Division 2 or
Zone 2 installation**
Voltage max: 32 V AC / 30 VDC
Power max: 64 VA / 60 W
Current max: 2 A AC / 2 ADC

(terminal 11,12,13,14)
(terminal 31,32,33,34)
(terminal 91,92,93,94,95)
 U_m : 253 V max. 400 Hz

| Module 9116B2-U9 Terminal 52-51,51-52 | | Group | Ca or Co | La or Lo | Lo/Ro |
|--|--------|--------------|----------|----------|---------|
| Voc, Uo | 16.6 V | IIC or A,B | 0.4µF | 1000 mH | 25 mH/Ω |
| Isc, Io | 0.2 mA | IIB or C,E,F | 2.3µF | 1000 mH | 100mH/Ω |
| Po | 0.8 mW | IIA or D,G | 9.5µF | 1000 mH | 200mH/Ω |


**9116B1-U9 and 9116B2-U9
Terminal 51-52**

Vmax or Uj: 30V;
Imax or Ii: 120mA;
Pi: 900mW;
Ci: 6nF;
Li: 2µH

LERBAKKEN 10, 8410 ROENDE DENMARK

9116Ax-U9 and 9116Bx-U9 Installation:

Non Hazardous area or
Class I, Division 2, Group ABCD T4
or Zone 2 Group IIC T4

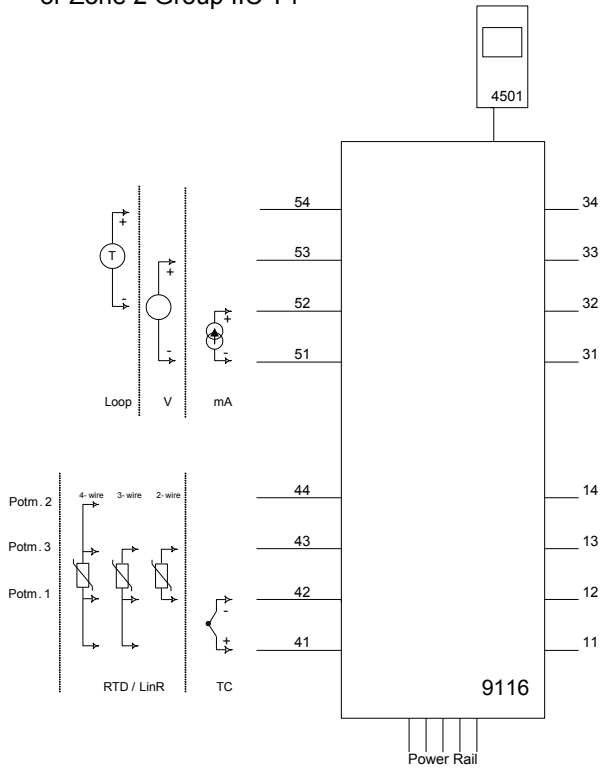

Supply terminal (31,32)
Voltage: 19.2 – 31.2 VDC

**Class I, Division 2 or
Zone 2 installation:**

Status relay, terminal (33,34)
Voltage max: 32 Vac/ 32 Vdc
Current max: 0.5 Aac / 0.3Adc

Relay output, terminal (13,14)
Voltage max: 32 V AC / 30 VDC
Power max: 64 VA / 60 W
Current max: 2 A AC / 2 ADC

LERBAKKEN 10, 8410 RØNDE DENMARK

INMETRO Desenhos para Instalação



Para instalação segura do 9116B. e 9116A. o manual seguinte deve ser observado. O módulo deve ser instalado somente por profissionais qualificados que estão familiarizados com as leis nacionais e internacionais, diretrizes e normas que se aplicam a esta área. Ano de fabricação pode ser obtido a partir dos dois primeiros dígitos do número de série



Para a instalação na Zona 2 o seguinte deve ser observado. O módulo de programação de 4501, deve ser utilizado apenas com os módulos PR electronics. É importante que o módulo esteja intacto e não tenha sido alterado ou modificado de qualquer maneira. Apenas os módulos 4501 livres de poeira e umidade devem ser instalados.

INMETRO Certificado **DEKRA 23.0006X**

Marcas: 9116B.

[Ex ia Ga] IIC/IIB/IIA

[Ex ia Da] IIIC

[Ex ia Ma] I

Marcas: 9116B., 9116A.

Ex ec nC IIC T4 Gc

Normas:

ABNT NBR IEC 60079-0:2020 Versão Corrigida:2023

ABNT NBR IEC 60079-7:2018 Versão Corrigida:2022


ABNT NBR IEC 60079-11:2013 Versão Corrigida:2017

ABNT NBR IEC 60079-15:2019

Instalação 9116B. :

Área de classificada
Zona 0, 1, 2, 20, 21 e 22

Área de não classificada
ou Zona 2

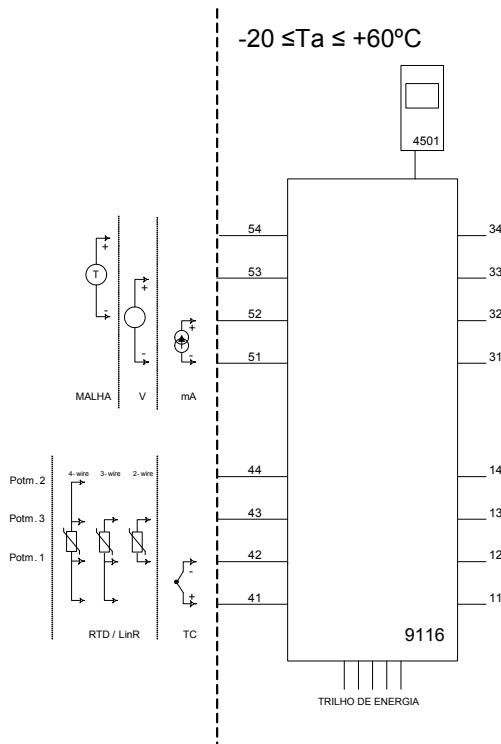

Supply terminais (31,32)

Voltagem: 19,2 – 31,2 VDC

Relê de estado, terminais (33,34)

Instalação em Zona 2:

Voltagem máx.: 32 VAC/ 32 VDC

Potência máx.: 16 VA / 32 W

Corrente máx.: 0,5 A AC / 1 A DC

Relê de estado, terminais (13,14)

Instalação em Zona 2:

Voltagem máx.: 32 VAC / 30 VDC

Potência máx.: 64 VA / 60 W

Corrente máx.: 2 A AC / 2 ADC

(terminais 11,12,13,14)

(terminais 31,32,33,34)

(terminais 91,92,93,94,95)

Um: 253 V; máx. 400 Hz

LERBAKKEN 10, 8410 RØNDE DENMARK

| | |
|-----------------------|--------|
| Module 9116B1 | |
| Terminal 51-52, 51-53 | |
| Ui | 30 V |
| Ii | 120 mA |
| Pi | 900 mW |
| Ci | 3 nF |
| Li | 1 µH |

| | |
|-----------------------|--------|
| Module 9116B2 | |
| Terminal 51-52, 51-53 | |
| Ui | 30 V |
| Ii | 120 mA |
| Pi | 900 mW |
| Ci | 3 nF |
| Li | 1 µH |

| | | | | | |
|-----------------------|--------|-------|--------|-------|----------|
| Module 9116B1 | | Group | Co | Lo | Lo/Ro |
| Terminal 51-54, 52-54 | | | | | |
| Uo | 28 V | IIC | 80 nF | 4 mH | 54 µH/Ω |
| Io | 93 mA | IIB | 640 nF | 16 mH | 218 µH/Ω |
| Po | 650 mW | IIA | 2.1 µF | 32 mH | 436 µH/Ω |

| | | | | | |
|-----------------------|--------|-------|---------|-------|----------|
| Module 9116B2 | | Group | Co | Lo | Lo/Ro |
| Terminal 51-54, 52-54 | | | | | |
| Uo | 21.4 V | IIC | 0.16 µF | 4 mH | 54 µH/Ω |
| Io | 93 mA | IIB | 1.13 µF | 16 mH | 218 µH/Ω |
| Po | 650 mW | IIA | 4.15 µF | 32 mH | 436 µH/Ω |

| | | | | | |
|----------------|--------|-------|--------|---------|---------|
| Module 9116B1 | | Group | Co | Lo | Lo/Ro |
| Terminal 51-53 | | | | | |
| Uo | 28 V | IIC | 80 nF | 1000 mH | 4 mH/Ω |
| Io | 1.1 mA | IIB | 640 nF | 1000 mH | 17 mH/Ω |
| Po | 8 mW | IIA | 2.1 µF | 1000 mH | 35 mH/Ω |

| | | | | | |
|----------------|--------|-------|---------|---------|---------|
| Module 9116B2 | | Group | Co | Lo | Lo/Ro |
| Terminal 51-53 | | | | | |
| Uo | 21.4 V | IIC | 0.16 µF | 1000 mH | 4 mH/Ω |
| Io | 1.1 mA | IIB | 1.13 µF | 1000 mH | 17 mH/Ω |
| Po | 8 mW | IIA | 4.15 µF | 1000 mH | 35 mH/Ω |

| | | | | | |
|----------------|--------|-------|---------|---------|----------|
| Module 9116B1 | | Group | Co | Lo | Lo/Ro |
| Terminal 51-52 | | | | | |
| Uo | 8.3 V | IIC | 7 µF | 1000 mH | 100 mH/Ω |
| Io | 0.2 mA | IIB | 73 µF | 1000 mH | 400 mH/Ω |
| Po | 0.4 mW | IIA | 1000 µF | 1000 mH | 800 mH/Ω |

| | | | | | |
|----------------|--------|-------|---------|---------|----------|
| Module 9116B2 | | Group | Co | Lo | Lo/Ro |
| Terminal 51-52 | | | | | |
| Uo | 8.3 V | IIC | 7 µF | 1000 mH | 100 mH/Ω |
| Io | 0.2 mA | IIB | 73 µF | 1000 mH | 400 mH/Ω |
| Po | 0.4 mW | IIA | 1000 µF | 1000 mH | 800 mH/Ω |

| | | | | | |
|----------------------|---------|-------|---------|---------|---------|
| Module 9116B1 | | Group | Co | Lo | Lo/Ro |
| Terminal 41,42,43,44 | | | | | |
| Uo | 8.3 V | IIC | 7 µF | 207 mH | 1 mH/Ω |
| Io | 13.1 mA | IIB | 73 µF | 828 mH | 5 mH/Ω |
| Po | 27.3 mW | IIA | 1000 µF | 1000 mH | 10 mH/Ω |

| | | | | | |
|----------------------|---------|-------|---------|---------|---------|
| Module 9116B2 | | Group | Co | Lo | Lo/Ro |
| Terminal 41,42,43,44 | | | | | |
| Uo | 8.3 V | IIC | 7 µF | 207 mH | 1 mH/Ω |
| Io | 13.1 mA | IIB | 73 µF | 828 mH | 5 mH/Ω |
| Po | 27.3 mW | IIA | 1000 µF | 1000 mH | 10 mH/Ω |

Notas de instalação:

Para o grupo I (minas), aplicam-se os parâmetros do grupo IIA.

Instalação em grau de poluição 2, categoria de sobretensão II conforme definido no IEC 60664-1.

Os circuitos não intrinsecamente seguros só pode ser connectado para sobretensão limitado ao categoria I/II como definido na IEC 60664-1.

Não separe conectores quando energizado ou quando uma mistura de gás explosivo estiver presente.

Não monte ou remova módulos do trilho de alimentação quando uma mistura de gás explosivo estiver presente.

Desligue a alimentação antes da manutenção.

A fiação de terminais sem uso não é permitida.

Em tipo de proteção [Ex ia Da] os parâmetros para a segurança intrínseca para grupo de gás IIB são aplicáveis.

Para a instalação em Zona 2, o módulo deve ser instalado em um invólucro conformidade com o tipo de proteção 'Ex e', fornecendo no mínimo grau de proteção IP54.

Dispositivos de entrada de cabo e elementos de vedação devem cumprir com os mesmos requisitos.

Para a instalação de trilho de energia na Zona 2, apenas o trilho de alimentação Rail 9400 fornecido pela Unidade de Controle de Potência 9410 é permitido.


Máx. torque terminal de parafuso 0,5 Nm. O fio trançado deve ser instalado com um comprimento de isolamento de 5 mm ou através de um terminal isolado adequado, como um terminal de cadaço.

LERBAKKEN 10, 8410 RØNDE DENMARK

Instalação 9116B.

 Área de classificada
 Zona 0,1,2, 20, 21, 22

 Área de não classificada
 ou Zona 2

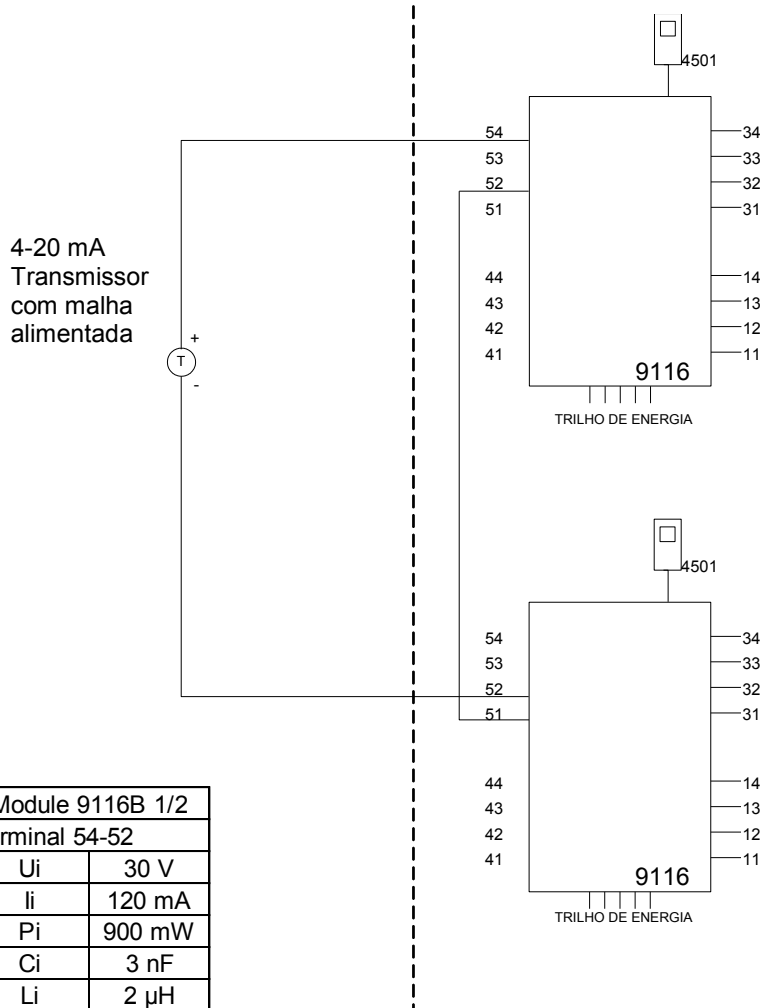 $-20 \leq T_a \leq +60^\circ\text{C}$

Supply terminais (31,32)

Voltagem: 19,2 – 31,2 VDC

Relê de estado, terminais (33,34)
Instalação em Zona 2:

 Voltagem máx.: 32 VAC / 32 VDC
 Potência máx.: 16 VA / 32 W
 Corrente máx.: 0,5 A AC / 1 A DC

Rele de estado, terminais (13,14)
Instalação em Zona 2:

 Voltagem máx.: 32 VAC / 30 VDC
 Potência máx.: 64 VA / 60 W
 Corrente máx.: 2 A AC / 2 ADC

(terminais 11,12,13,14)
(terminais 31,32,33,34)
(terminais 91,92,93,94,95)
 $U_m: 253 \text{ V}; \text{máx. } 400 \text{ Hz}$

| Module 9116B 1/2 | |
|------------------|--------|
| Terminal 54-52 | |
| U _i | 30 V |
| I _i | 120 mA |
| P _i | 900 mW |
| C _i | 3 nF |
| L _i | 2 µH |

| Module 9116B1 | | Group | Co | Lo | Lo/Ro |
|--------------------|--------|-------|--------|-------|----------|
| Term. 54-52; 51-52 | | | | | |
| U _o | 28 V | IIC | 80 nF | 4 mH | 54 µH/Ω |
| I _o | 93 mA | IIB | 640 nF | 16 mH | 218 µH/Ω |
| P _o | 650 mW | IIA | 2.1 µF | 32 mH | 436 µH/Ω |


| Module 9116B2 | | Group | Co | Lo | Lo/Ro |
|--------------------|--------|-------|---------|-------|----------|
| Term. 54-52; 51-52 | | | | | |
| U _o | 21.4 V | IIC | 0.16 µF | 4 mH | 54 µH/Ω |
| I _o | 93 mA | IIB | 1.13 µF | 16 mH | 218 µH/Ω |
| P _o | 650 mW | IIA | 4.15 µF | 32 mH | 436 µH/Ω |

LERBAKKEN 10, 8410 RØNDE DENMARK

Instalação 9116B.

 Área de classificada
 Zona 0, 1, 2, 20, 21, 22

 Área de não classificada
 ou Zona 2

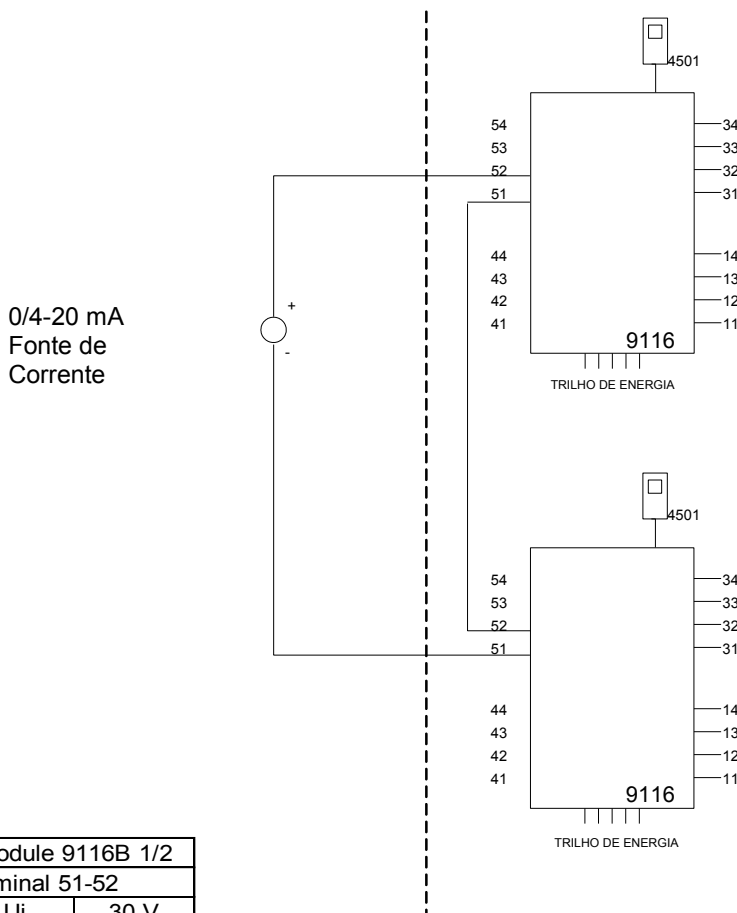 $-20 \leq T_a \leq +60^\circ\text{C}$

Supply terminais (31,32)
 Voltagem: 19,2 – 31,2 VDC

Relê de estado, terminais (33,34)
Instalação em Zona 2:
 Voltagem máx.: 32 VAC / 32 VDC
 Potência máx.: 16 VA / 32 W
 Corrente máx.: 0,5 A AC / 1 A DC

Rele de estado, terminais (13,14)
Instalação em Zona 2:
 Voltagem máx.: 32 VAC / 30 VDC
 Potência máx.: 64 VA / 60 W
 Corrente máx.: 2 A AC / 2 ADC

(terminais 11,12,13,14)
(terminais 31,32,33,34)
(terminais 91,92,93,94,95)
 $U_m: 253 \text{ V máx. } 400 \text{ Hz}$


| Module 9116B 1/2 | |
|------------------|--------|
| Terminal 51-52 | |
| U _i | 30 V |
| I _i | 120 mA |
| P _i | 900 mW |
| C _i | 3 nF |
| L _i | 2 μH |

| Module 9116B 1/2 | | Group | Co | Lo | Lo/Ro |
|--------------------|--------|-------|--------|--------|---------|
| Term. 52-51, 51-52 | | | | | |
| U _o | 16.6 V | IIC | 0.4 μF | 100 mH | 25mH/Ω |
| I _o | 0.2 mA | IIB | 2.3 μF | 100 mH | 100mH/Ω |
| P _o | 0.8 mW | IIA | 9.5 μF | 100 mH | 200mH/Ω |

LERBAKKEN 10, 8410 RØNDE DENMARK

Instalação 9116A. :

Área de não classificada
ou Zona 2

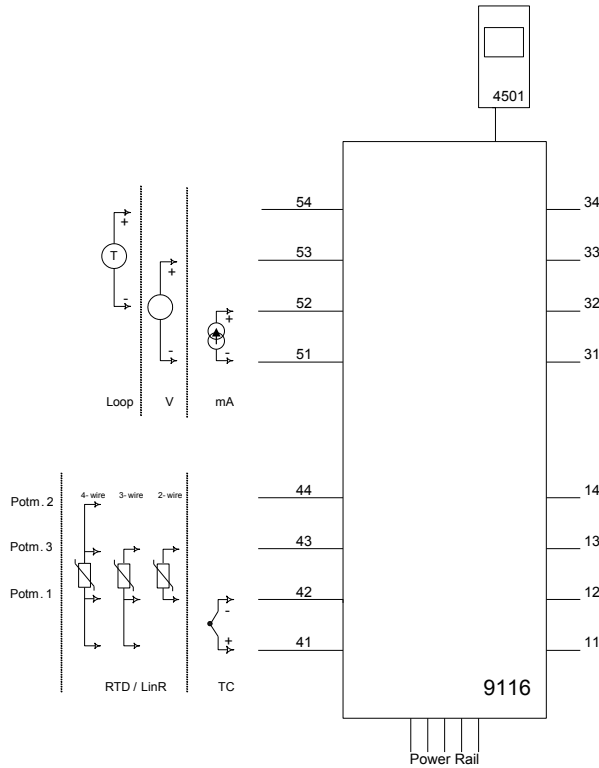

Supply terminais (31,32)

Voltagem: 19.2 – 31.2 VDC

Relê de estado, terminais (33,34)

Instalação em Zona 2:

Voltagem máx.: 32 VAC / 32 VDC

Potência máx.: 16 VA / 32 W

Corrente máx.: 0,5 A AC / 1 A DC

Relê de estado, terminais (13,14)

Instalação em Zona 2:

Voltagem máx.: 32 VAC / 30 VDC

Potência máx.: 64 VA / 60 W

Corrente máx.: 2 A AC / 2 ADC

Para instalação na Zona 2, o módulo deverá ser instalado em um invólucro no tipo de proteção Ex e, proporcionando um grau de proteção de pelo menos IP54. Os dispositivos de entrada de cabos e os elementos de obturação devem cumprir os mesmos requisitos.

Para instalação no Power Rail na Zona 2, somente o Power Rail tipo 9400 fornecido pela Unidade de Controle de Potência tipo 9410 (Certificado de Exame de Tipo IECEx KEM 08.0025X) é permitido.


O módulo de programação 4501 deve ser usado somente com módulos da PR Electronics. É importante que o módulo não esteja danificado e não tenha sido alterado ou modificado de forma alguma. Somente módulos 4501 livres de poeira e umidade deverão ser instalados.

LERBAKKEN 10, 8410 ROENDE DENMARK

KC 설치 도면



9113의 안전한 설치를 위해 다음 사항을 준수해야 합니다. 이 모듈은 이 지역에 적용되는 국내 및 국제 법률, 지침 및 표준에 정통한 유자격자만 설치해야 합니다. 제조연도는 일련번호의 처음 두 자리입니다.



구역 2에 설치하려면 다음 사항을 준수해야 합니다. 4501 프로그래밍 모듈은 PR electronics 모듈과 함께만 사용해야 합니다. 모듈이 손상되지 않았고, 어떤 식으로든 변경 또는 수정되지 않는 것이 중요합니다. 먼지와 습기가 없는 상태에서 4501 모듈을 설치해야 합니다.

KC 인증서: 21-AV4BO-0176X
마킹 9116Bxx: [Ex ia Ga] IIC/IIB/IIA

KC 인증서: 21-AV4BO-0177X
마킹 9116Bxx: [Ex ia Da] IIIC


KC 인증서: 21-AV4BO-0178X
마킹 9116Axx: Ex nA nC IIC T4 Gc

표준 IEC60079-0:2017, IEC60079-11:2011,
IEC60079-15:2017, IEC60079-7:2015+A1:2017

9116Bxx 설치:

위험 지역
구역 0, 1, 2, 20, 21, 22

비위험 지역
또는 구역 2

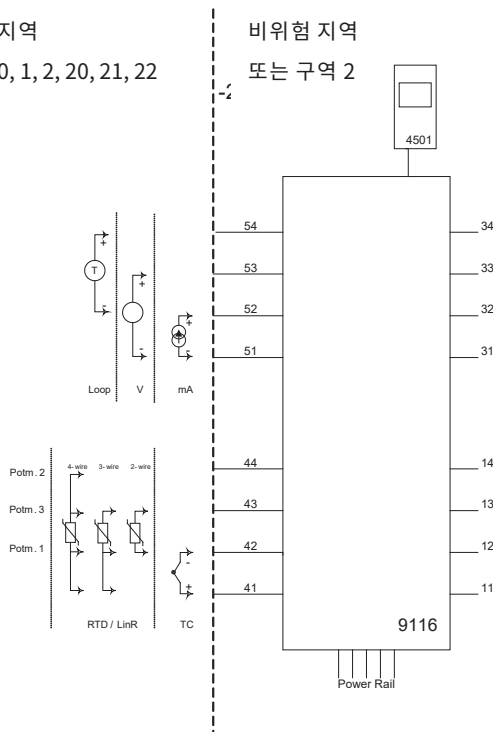

공급, 단자 (31,32)
전압: 19.2 - 31.2 VDC

상태 릴레이, 단자(33,34)
구역 2 설치:
최대 전압: 32 VAC / 32 VDC
최대 출력: 16 VA / 32 W
최대 전류: 0.5 A AC / 1 A DC

릴레이 출력, 단자 (13,14)
구역 2 설치:
최대 전압: 32 V AC / 30 VDC
최대 출력: 64 VA / 60 W
최대 전류: 2 A AC / 2 ADC

(단자 11,12,13,14)
(단자 31,32,33,34)
(단자 91,92,93,94,95)
 U_m : 253 V 최대 400 Hz

LERBAKKEN 10, 8410 ROENDE DENMARK

| Module 9116B1 | |
|-----------------------|--------|
| Terminal 51-52, 51-53 | |
| Ui | 30 V |
| Ii | 120 mA |
| Pi | 900 mW |
| Ci | 3 nF |
| Li | 1 μH |

| Module 9116B2 | |
|-----------------------|--------|
| Terminal 51-52, 51-53 | |
| Ui | 30 V |
| Ii | 120 mA |
| Pi | 900 mW |
| Ci | 3 nF |
| Li | 1 μH |

| Module 9116B1 | | Group | Co | Lo | Lo/Ro |
|-----------------------|--------|-------|--------|-------|----------|
| Terminal 51-54, 52-54 | | | | | |
| Uo | 28 V | IIC | 80 nF | 4 mH | 54 μH/Ω |
| Io | 93 mA | IIB | 640 nF | 16 mH | 218 μH/Ω |
| Po | 650 mW | IIA | 2.1 μF | 32 mH | 436 μH/Ω |

| Module 9116B2 | | Group | Co | Lo | Lo/Ro |
|-----------------------|--------|-------|---------|-------|----------|
| Terminal 51-54, 52-54 | | | | | |
| Uo | 21.4 V | IIC | 0.16 μF | 4 mH | 54 μH/Ω |
| Io | 93 mA | IIB | 1.13 μF | 16 mH | 218 μH/Ω |
| Po | 650 mW | IIA | 4.15 μF | 32 mH | 436 μH/Ω |

| Module 9116B1 | | Group | Co | Lo | Lo/Ro |
|----------------|--------|-------|--------|---------|---------|
| Terminal 51-53 | | | | | |
| Uo | 28 V | IIC | 80 nF | 1000 mH | 4 mH/Ω |
| Io | 1.1 mA | IIB | 640 nF | 1000 mH | 17 mH/Ω |
| Po | 8 mW | IIA | 2.1 μF | 1000 mH | 35 mH/Ω |

| Module 9116B2 | | Group | Co | Lo | Lo/Ro |
|----------------|--------|-------|---------|---------|---------|
| Terminal 51-53 | | | | | |
| Uo | 21.4 V | IIC | 0.16 μF | 1000 mH | 4 mH/Ω |
| Io | 1.1 mA | IIB | 1.13 μF | 1000 mH | 17 mH/Ω |
| Po | 8 mW | IIA | 4.15 μF | 1000 mH | 35 mH/Ω |

| Module 9116B1 | | Group | Co | Lo | Lo/Ro |
|----------------|--------|-------|---------|---------|----------|
| Terminal 51-52 | | | | | |
| Uo | 8.3 V | IIC | 7 μF | 1000 mH | 100 mH/Ω |
| Io | 0.2 mA | IIB | 73 μF | 1000 mH | 400 mH/Ω |
| Po | 0.4 mW | IIA | 1000 μF | 1000 mH | 800 mH/Ω |

| Module 9116B2 | | Group | Co | Lo | Lo/Ro |
|----------------|--------|-------|---------|---------|----------|
| Terminal 51-52 | | | | | |
| Uo | 8.3 V | IIC | 7 μF | 1000 mH | 100 mH/Ω |
| Io | 0.2 mA | IIB | 73 μF | 1000 mH | 400 mH/Ω |
| Po | 0.4 mW | IIA | 1000 μF | 1000 mH | 800 mH/Ω |

| Module 9116B1 | | Group | Co | Lo | Lo/Ro |
|----------------------|---------|-------|---------|---------|---------|
| Terminal 41,42,43,44 | | | | | |
| Uo | 8.3 V | IIC | 7 μF | 207 mH | 1 mH/Ω |
| Io | 13.1 mA | IIB | 73 μF | 828 mH | 5 mH/Ω |
| Po | 27.3 mW | IIA | 1000 μF | 1000 mH | 10 mH/Ω |

| Module 9116B2 | | Group | Co | Lo | Lo/Ro |
|----------------------|---------|-------|---------|---------|---------|
| Terminal 41,42,43,44 | | | | | |
| Uo | 8.3 V | IIC | 7 μF | 207 mH | 1 mH/Ω |
| Io | 13.1 mA | IIB | 73 μF | 828 mH | 5 mH/Ω |
| Po | 27.3 mW | IIA | 1000 μF | 1000 mH | 10 mH/Ω |

설치 참고 사항:

그룹 I(광산)의 경우 그룹 IIA의 매개변수가 적용됩니다.

IEC 60664-1에 정의된 대로 오염 등급 2, 과전압 범주 II에 설치하십시오.

전원이 공급되고 폭발성 가스 혼합물이 있는 경우, 커넥터를 분리하지 마십시오.

폭발성 가스 혼합물이 있는 경우, 파워 레일에 모듈을 장착하거나 제거하지 마십시오.

수리하기 전에 전원을 분리하십시오.

사용하지 않는 단자의 배선은 허용되지 않습니다.

보호 유형 [Ex ia Da]에서는 가스 그룹 IIB의 본질 안전 매개변수를 적용할 수 있습니다.

구역 2에 설치하는 경우, 모듈을 보호 유형 Ex n 또는 Ex e인 인클로저에 설치하고, 최소한 IP54의 보호 수준을 제공해야 합니다. 케이블 인입 장치와 밀폐 요소는 동일한 요구 사항을 충족해야 합니다.

구역 2의 파워 레일에 설치하는 경우, 전력 제어 장치 유형 9410(인증서 IECEx KEM 08.0025X)의 공급을 받는 파워 레일 유형 9400만 허용됩니다.

나사 단자대 토크 0.5 Nm.


연선은 5mm의 절연 피복을 제거 후 사용을 하거나 부트레이스 페룰과 같은 적절한 절연 단자를 통해 설치해야 합니다.

LERBAKKEN 10, 8410 ROENDE DENMARK

9116Bxx 설치:

위험 지역
구역 0,1,2, 20, 21, 22

비위험 지역
또는 구역 2

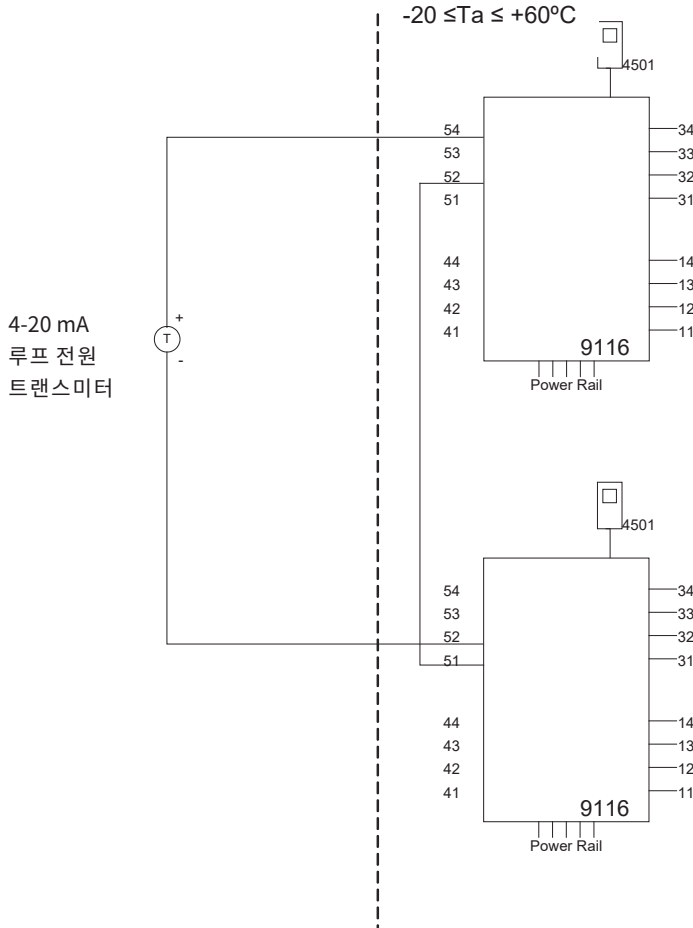

공급, 단자 (31,32)

전압: 19.2 – 31.2 VDC

상태 릴레이, 단자 (33,34)

구역 2 설치:
최대 전압: 32 VAC / 32 VDC

최대 출력: 16 VA / 32 W

최대 전류: 0.5 A AC / 1 A DC

릴레이 출력, 단자 (13,14)

구역 2 설치:
최대 전압: 32 V AC / 30 VDC

최대 출력: 64 VA / 60 W

최대 전류: 2 A AC / 2 ADC

(단자 11,12,13,14)

(단자 31,32,33,34)

(단자 91,92,93,94,95)

U_m: 253 V 최대 400 Hz

| Module 9116B 1/2 | |
|------------------|--------|
| Terminal 54-52 | |
| U _i | 30 V |
| I _i | 120 mA |
| P _i | 900 mW |
| C _i | 3 nF |
| L _i | 2 μH |

| Module 9116B1 | | Group | Co | Lo | Lo/Ro |
|--------------------|--------|-------|--------|-------|----------|
| Term. 54-52; 51-52 | | | | | |
| U _o | 28 V | IIC | 80 nF | 4 mH | 54 μH/Ω |
| I _o | 93 mA | IIB | 640 nF | 16 mH | 218 μH/Ω |
| P _o | 650 mW | IIA | 2.1 μF | 32 mH | 436 μH/Ω |

| Module 9116B2 | | Group | Co | Lo | Lo/Ro |
|--------------------|--------|-------|---------|-------|----------|
| Term. 54-52; 51-52 | | | | | |
| U _o | 21.4 V | IIC | 0.16 μF | 4 mH | 54 μH/Ω |
| I _o | 93 mA | IIB | 1.13 μF | 16 mH | 218 μH/Ω |
| P _o | 650 mW | IIA | 4.15 μF | 32 mH | 436 μH/Ω |

개정일:
2024년 2월 29일

버전 개정
V1 R0

제작:
THDE

페이지:
3/5


LERBAKKEN 10, 8410 ROENDE DENMARK

9116Bxx 설치:

위험 지역
구역 0, 1, 2, 20, 21, 22

비위험 지역
또는 구역 2

-20 ≤ Ta ≤ +60°C

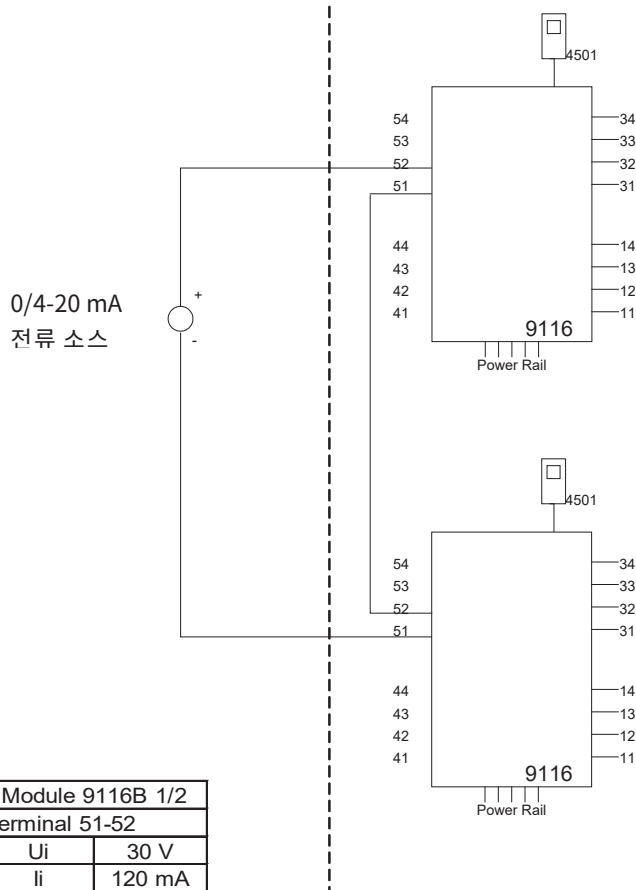

공급, 단자 (31,32)

전압: 19.2 – 31.2 VDC

상태 릴레이, 단자 (33,34)

구역 2 설치:

최대 전압: 32 VAC / 32 VDC

최대 출력: 16 VA / 32 W

최대 전류: 0.5 AAC / 1 ADC

릴레이 출력, 단자 (13,14)

구역 2 설치:

최대 전압: 32 VAC / 30 VDC

최대 출력: 64 VA / 60 W

최대 전류: 2 AAC / 2 ADC

(단자 11,12,13,14)

(단자 31,32,33,34)

(단자 91,92,93,94,95)

U_m: 253 V 최대 400 Hz

| | |
|------------------|--------|
| Module 9116B 1/2 | |
| Terminal 51-52 | |
| U _i | 30 V |
| I _i | 120 mA |
| P _i | 900 mW |
| C _i | 3 nF |
| L _i | 2 μH |

| | | | | | |
|--------------------|--------|-------|--------|--------|---------|
| Module 9116B 1/2 | | Group | Co | Lo | Lo/Ro |
| Term. 52-51, 51-52 | | | | | |
| U _o | 16.6 V | IIC | 0.4 μF | 100 mH | 25mH/Ω |
| I _o | 0.2 mA | IIB | 2.3 μF | 100 mH | 100mH/Ω |
| P _o | 0.8 mW | IIA | 9.5 μF | 100 mH | 200mH/Ω |

개정일:
2024년 2월 29일

버전 개정
V1 R0


제작:
THDE

페이지:
4/5

LERBAKKEN 10, 8410 ROENDE DENMARK

9116Axx 설치:

비분류 지역 또는 구역 2

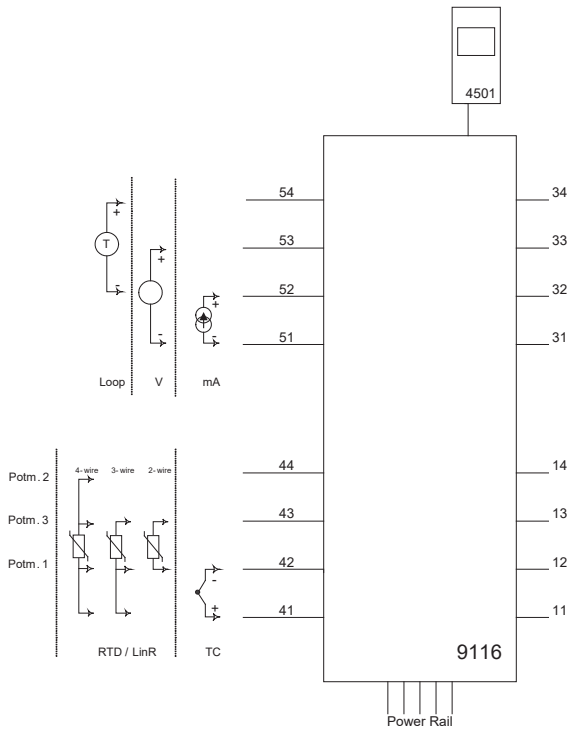

공급, 단자(31,32)

전압: 19.2 - 31.2 VDC

상태 릴레이, 단자(33,34)

구역 2 설치:

최대 전압: 32 VAC / 32 VDC

최대 출력: 16 VA / 32 W

최대 전류: 0.5 A AC / 1 A DC

릴레이 출력, 단자 (13,14)

구역 2 설치:

최대 전압: 32 V AC / 30 VDC

최대 출력: 64 VA / 60 W

최대 전류: 2 A AC / 2 ADC

구역 2에 설치하는 경우, 모듈을 보호 유형 Ex n 또는 Ex e인 인클로저에 설치하고, 최소한 IP54의 보호 수준을 제공해야 합니다. 케이블 진입 장치와 밀폐 요소는 동일한 요구 사항을 충족해야 합니다.

구역 2의 파워 레일에 설치하는 경우, 전력 제어 장치 유형 9410(유형 시험 인증서 IECEx KEM 08.0025X)의 공급을 받는 파워 레일 유형 9400만 허용됩니다.

4501 프로그래밍 모듈은 PR electronics 모듈과 함께만 사용해야 합니다. 모듈이 손상되지 않았고, 어떤 식으로든 변경 또는 수정되지 않는 것이 중요합니다. 먼지와 습기가 없는 상태에서 4501 모듈을 설치해야 합니다.

Document history

The following list provides notes concerning revisions of this document.

| Rev. ID | Date | Notes |
|----------------|-------------|---|
| 106 | 1722 | Specifications for max. required power added. New ATEX, IECEX and INMETRO certificates and installation drawings. |
| 107 | 1815 | Relay data updated, graph with resistive loads inserted. ATEX and IECEX installation drawings updated with new relay data. |
| 108 | 1941 | 9116A-version included in manual. Variant with UL 913 approval added. CCOE approval discontinued. New FM certificate and installation drawing. Routing diagram updated. |
| 109 | 2103 | |
| 110 | 2301 | ATEX and IECEX approvals updated - Ex nA changed to Ex ec. UKEX approval added. Variant with Korean KCs approval added. |
| 111 | 2407 | ATEX / UKEX installation drawing updated - UKEX certificate for 9116B added. INMETRO approval updated - Ex nA replaced by Ex ec. |
| 112 | 2418 | KC installation drawing updated. |

We are near you, *all over the world*

Our trusted red boxes are supported wherever you are

All our devices are backed by expert service and a 5-year warranty. With each product you purchase, you receive personal technical support and guidance, day-to-day delivery, repair without charge within the warranty period and easily accessible documentation.

We are headquartered in Denmark, and have offices and authorized partners the world over. We are a local

business with a global reach. This means that we are always nearby and know your local markets well. We are committed to your satisfaction and provide **PERFORMANCE MADE SMARTER** all around the world.

For more information on our warranty program, or to meet with a sales representative in your region, visit prelectronics.com.

Benefit today from *PERFORMANCE MADE SMARTER*

PR electronics is the leading technology company specialized in making industrial process control safer, more reliable and more efficient. Since 1974, we have been dedicated to perfecting our core competence of innovating high precision technology with low power consumption. This dedication continues to set new standards for products communicating, monitoring and connecting our customers' process measurement points to their process control systems.

Our innovative, patented technologies are derived from our extensive R&D facilities and from having a great understanding of our customers' needs and processes. We are guided by principles of simplicity, focus, courage and excellence, enabling some of the world's greatest companies to achieve PERFORMANCE MADE SMARTER.